 
 
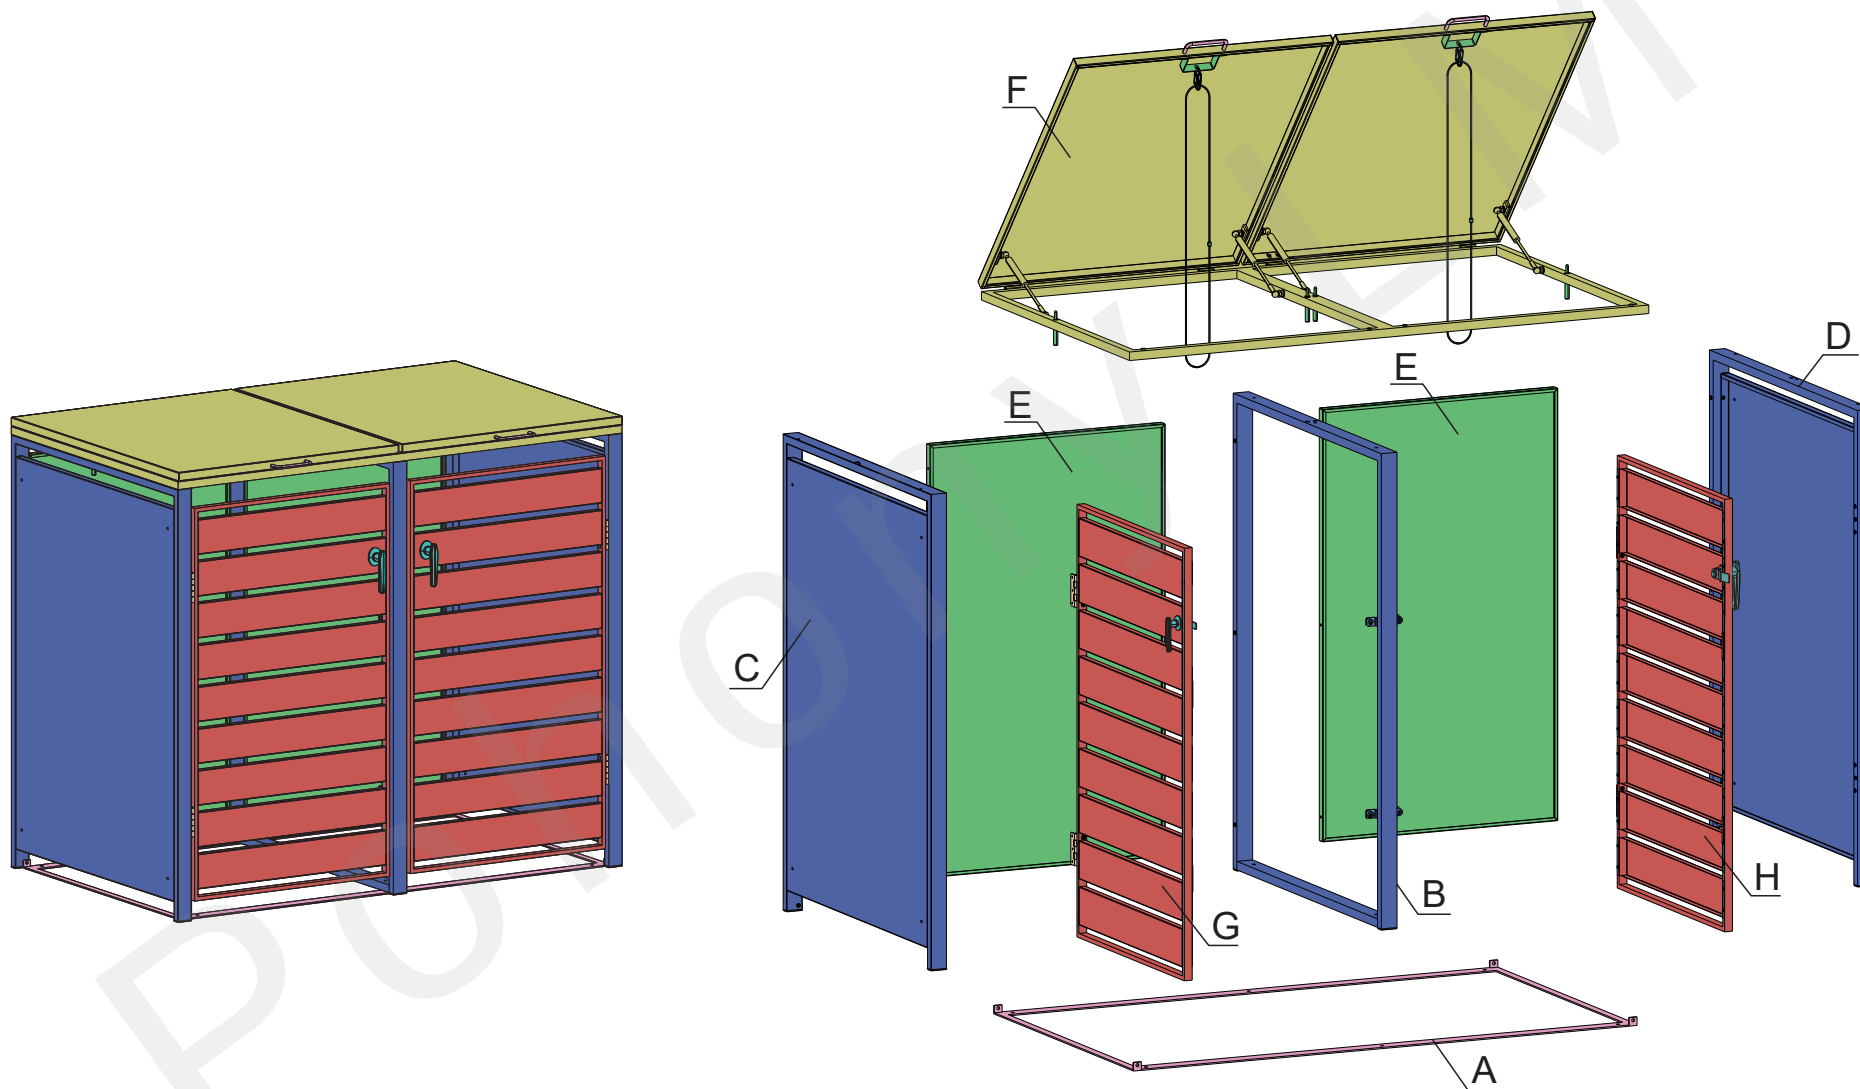 
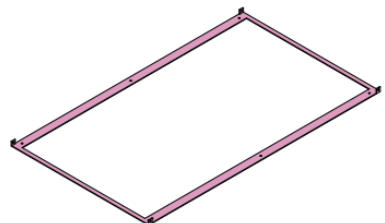 
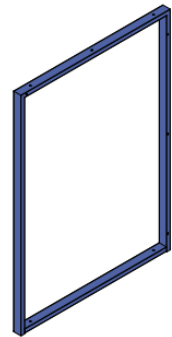 
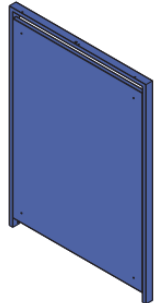 
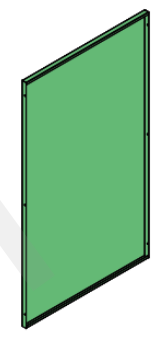 
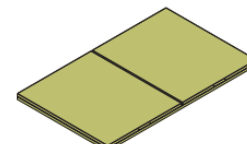 
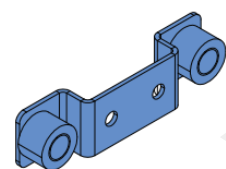 
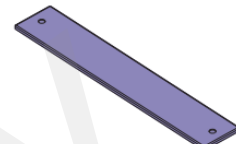 
 
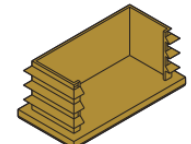 
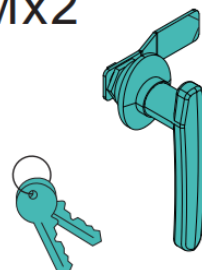 
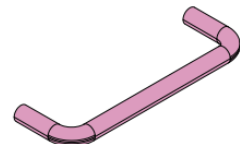 
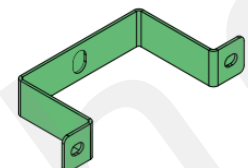 
 
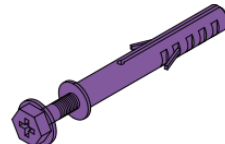 
 
 
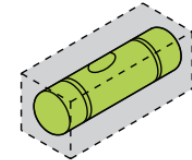 
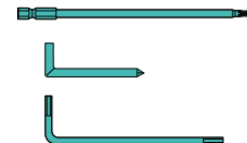 
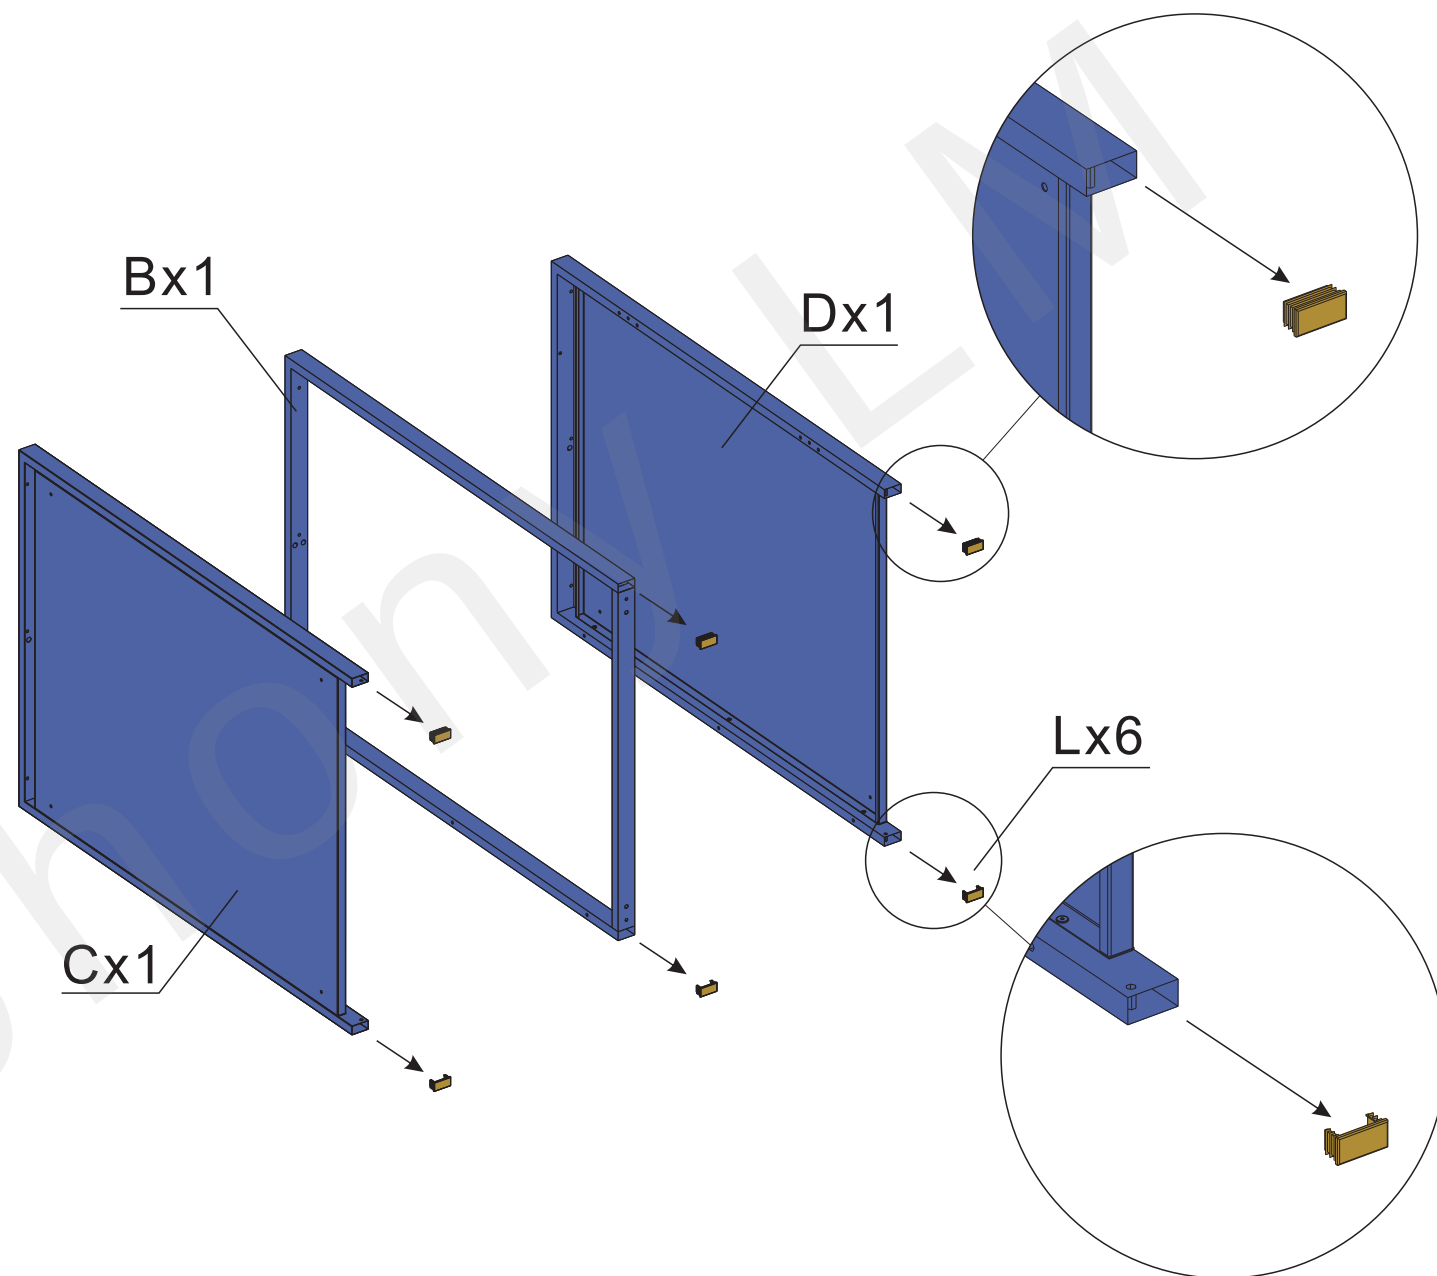 


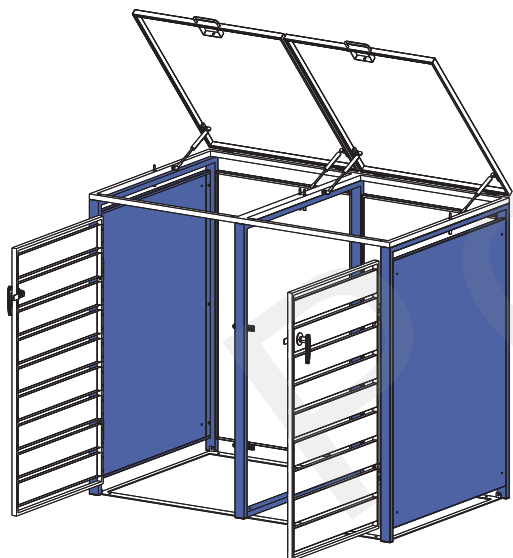




Ax1 	Bx1 	Cx1 	Dx1 	Ex2 			
Fx1 	Gx1 	Hx1 	Ix2 	Jx1 	Kx4 	Lx6 	
Mx2 	Nx2 	Ox2 	Px4 	Qx6 	Rx16 	Sx10 	
					M4x10mm	M4x20mm	
Tx9 	Ux30 	Vx2 	Wx4 	Xx4 	Yx1 	Zx1 	Y1x4 
M4x30mm	M4x12mm						

Poznámka: Ak chcete pripojiť ďalšie boxy na koše, použite prosím položky S, W + X



KROK1

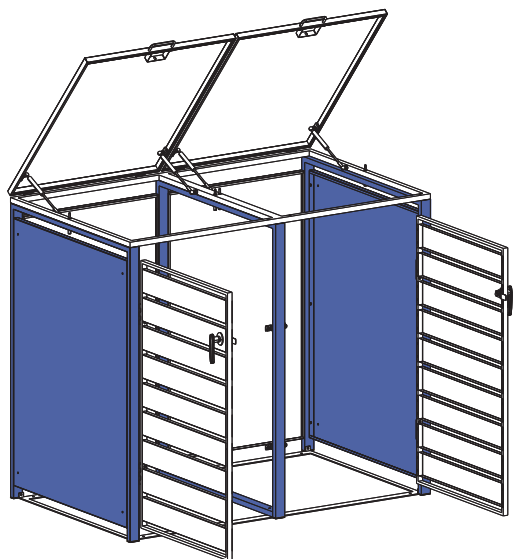

   
KROK2

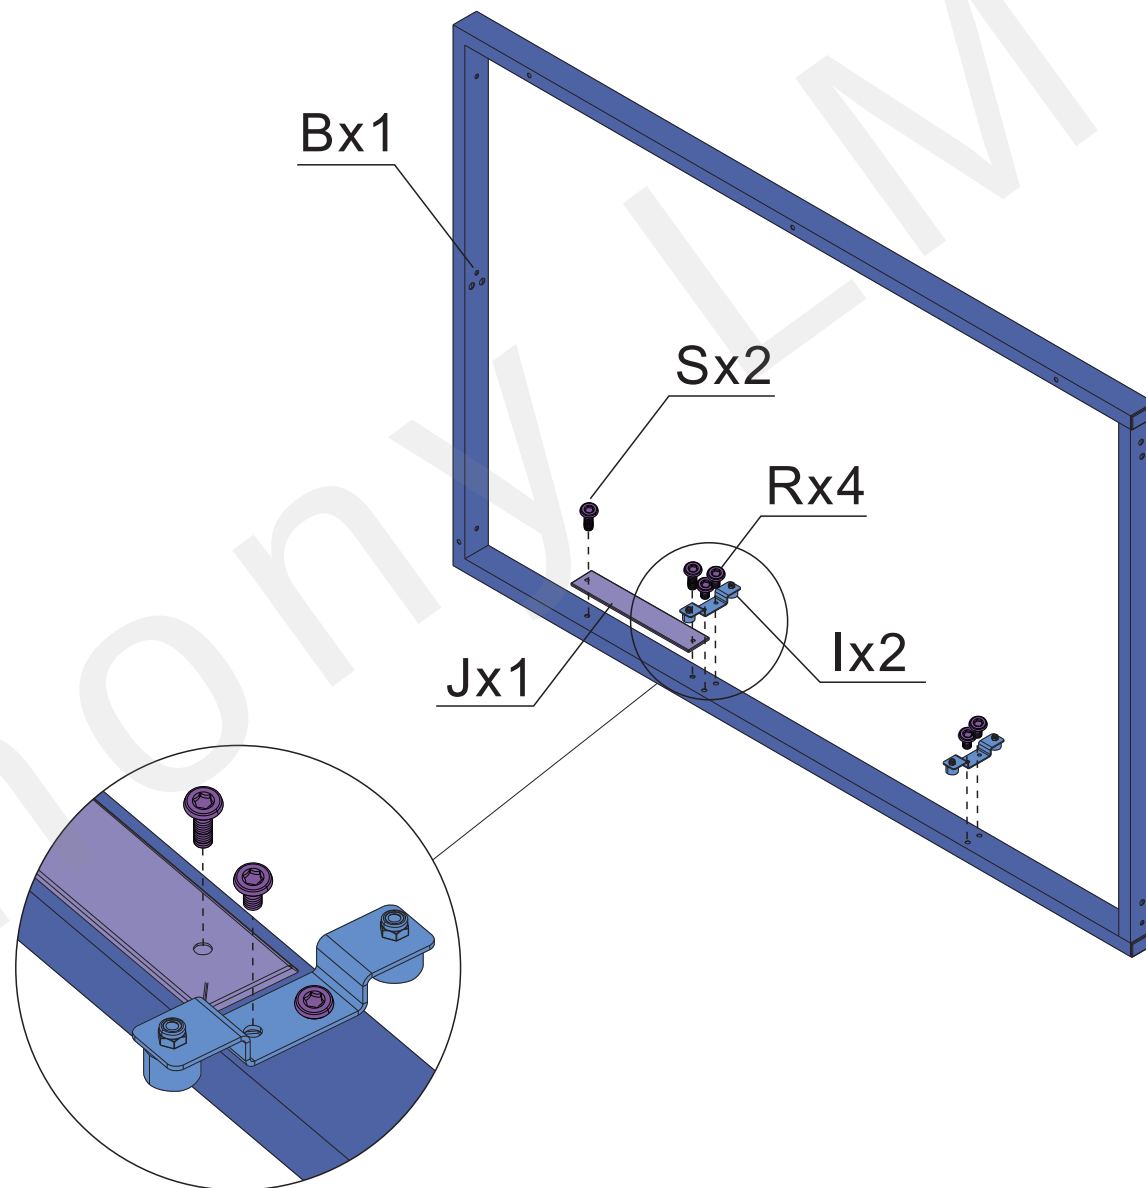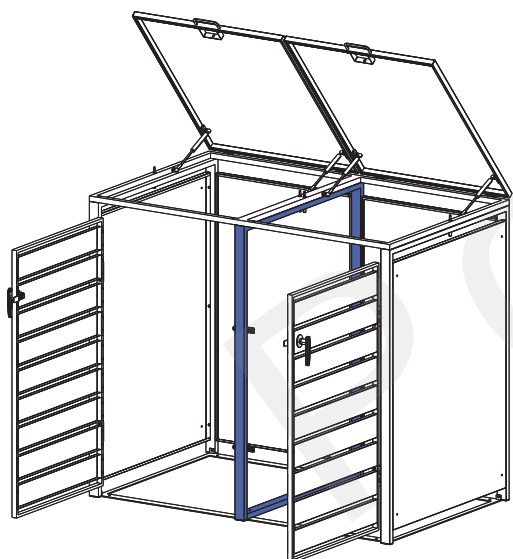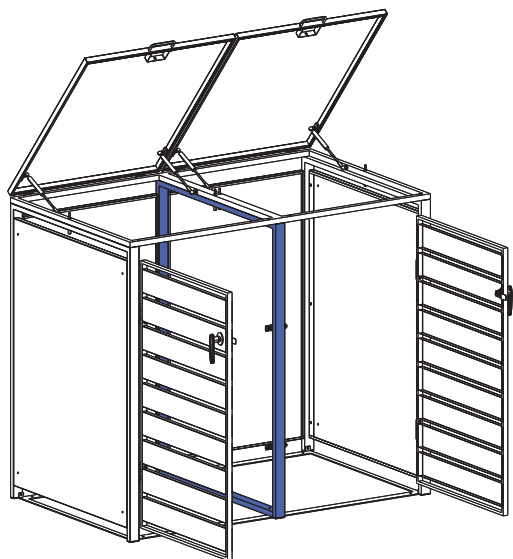

KROK3

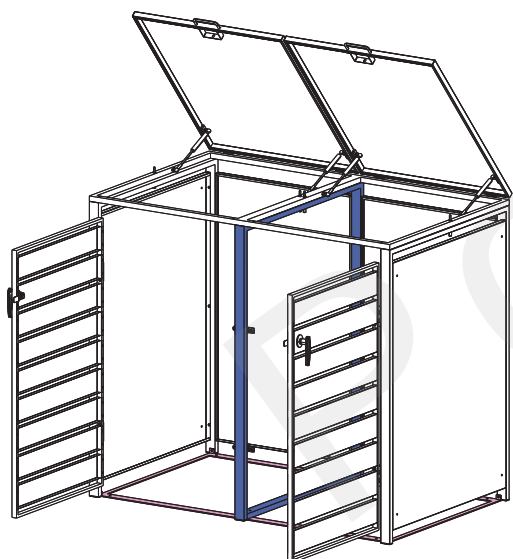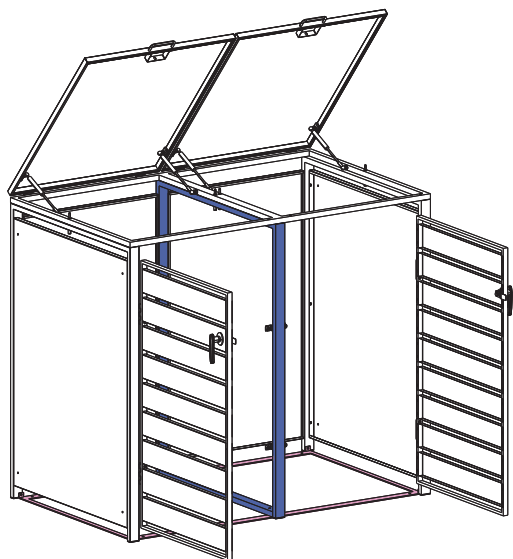  


Bx1



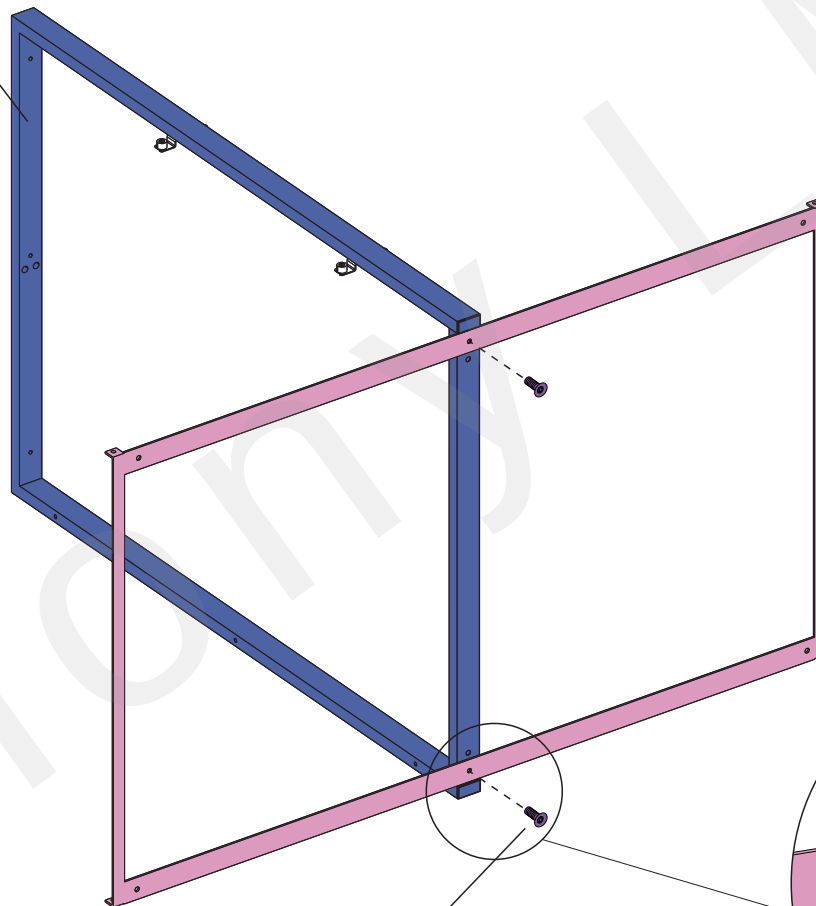 


Ax1



 
Ux2

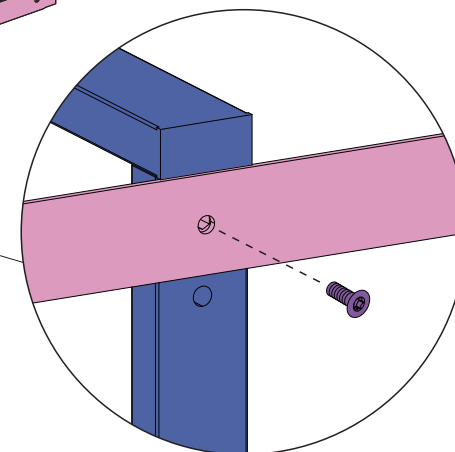




KROK4

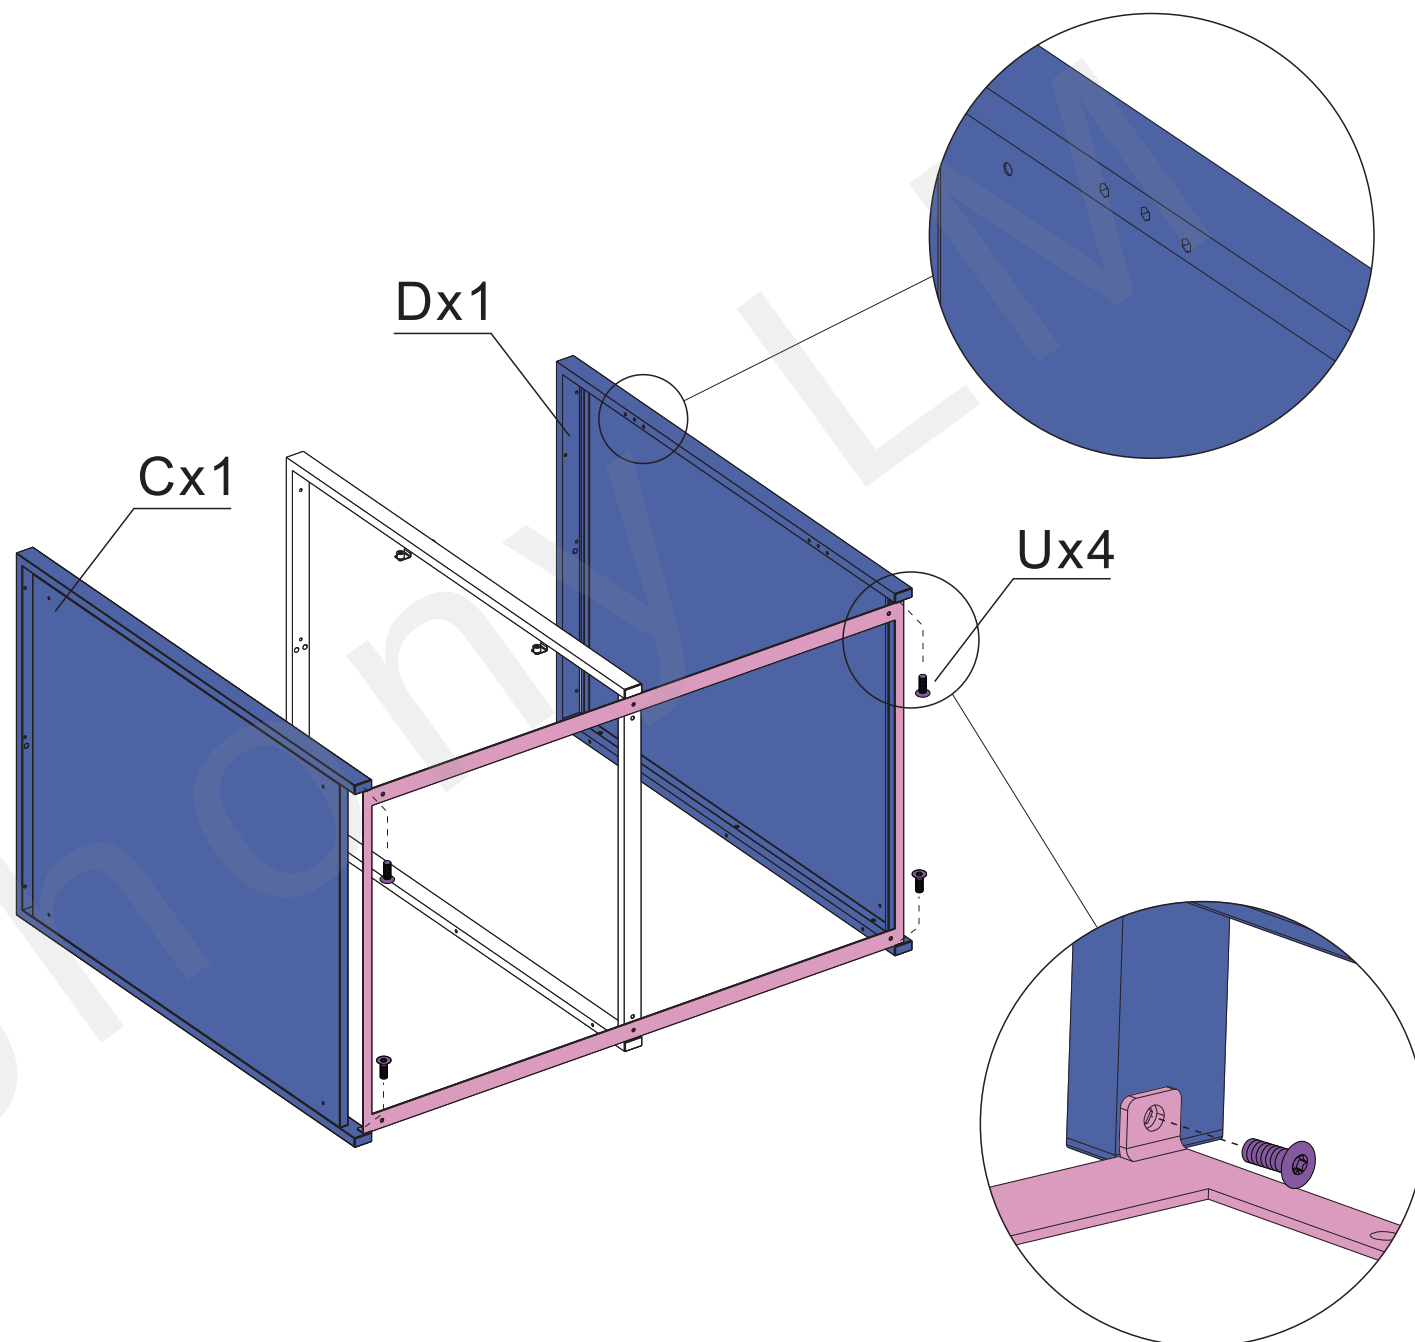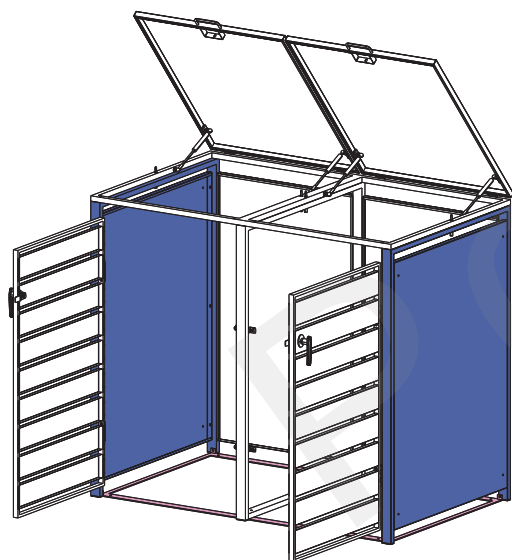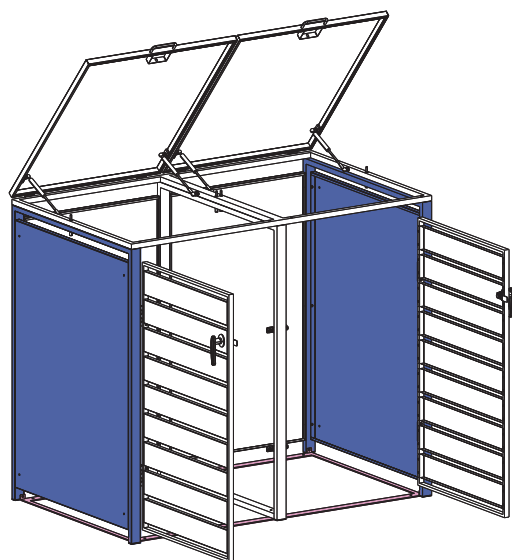   




KROK5

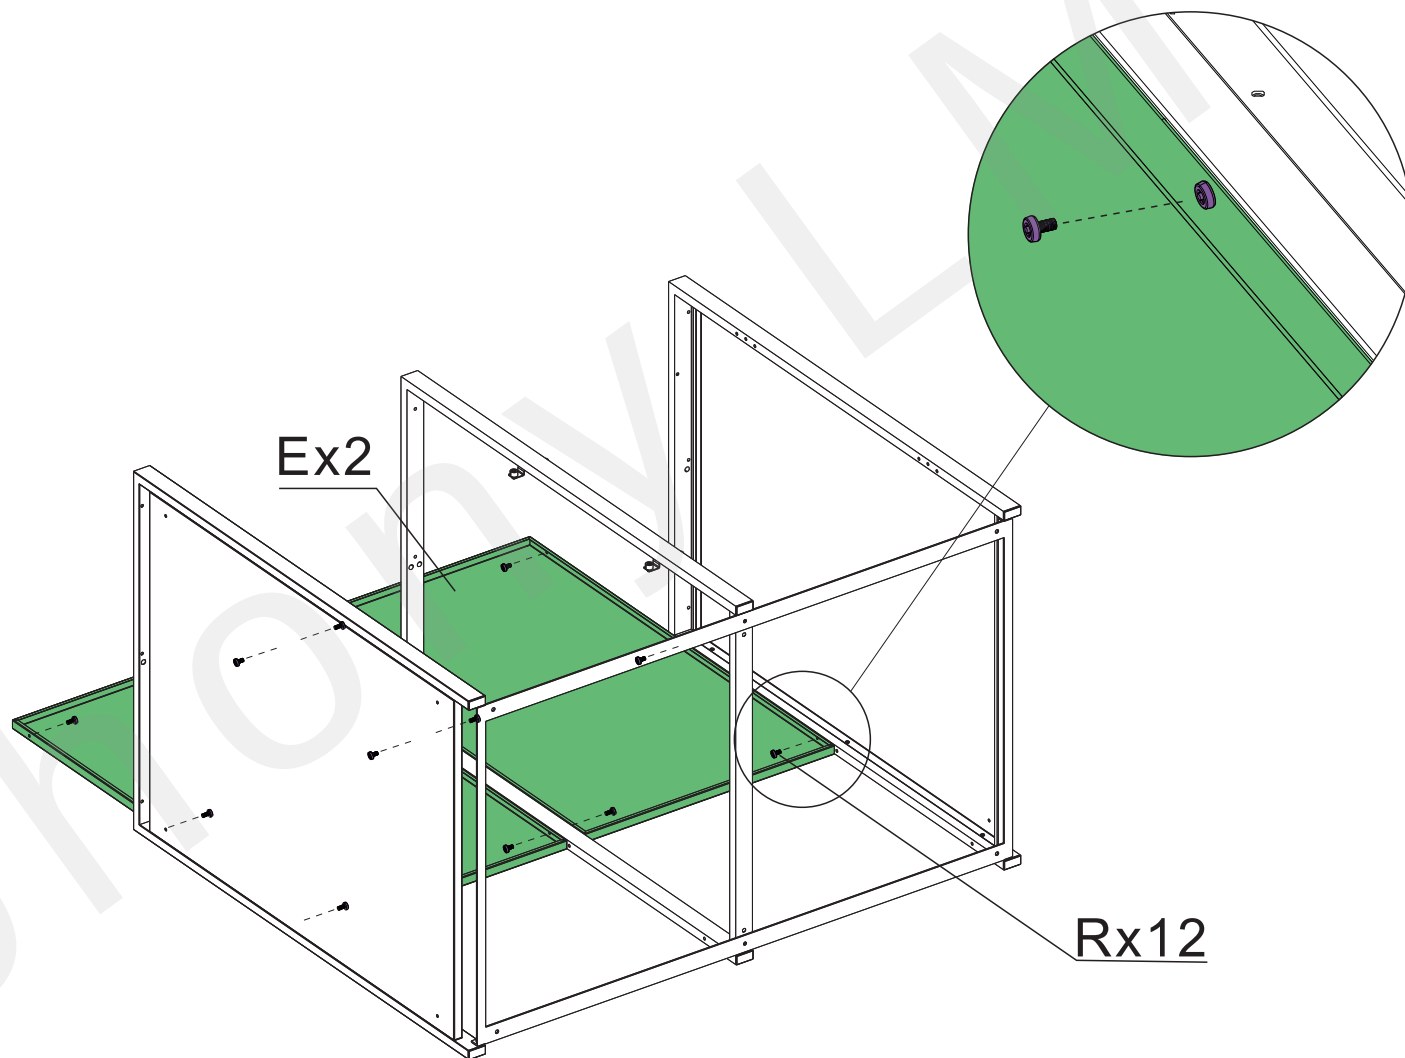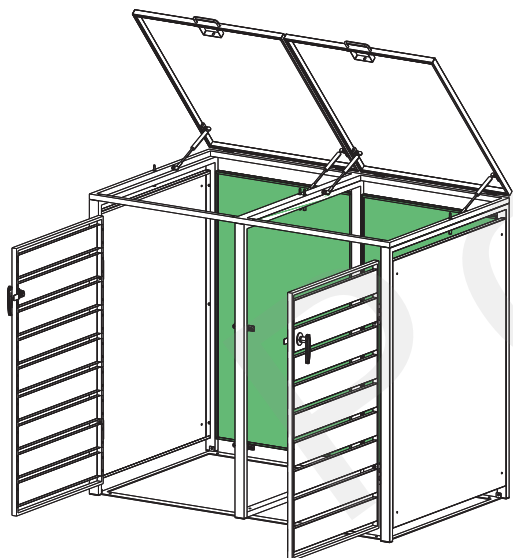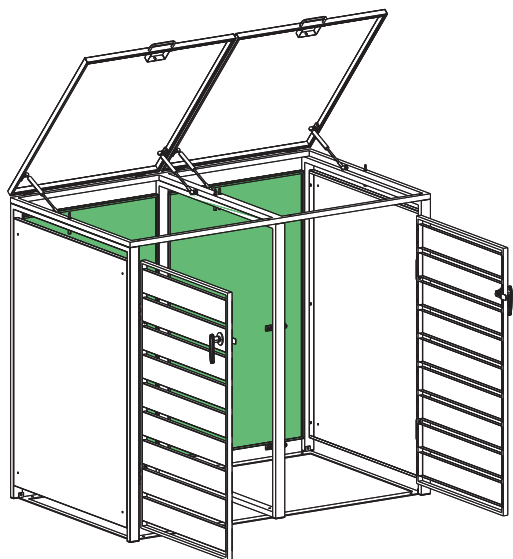   






KROK6

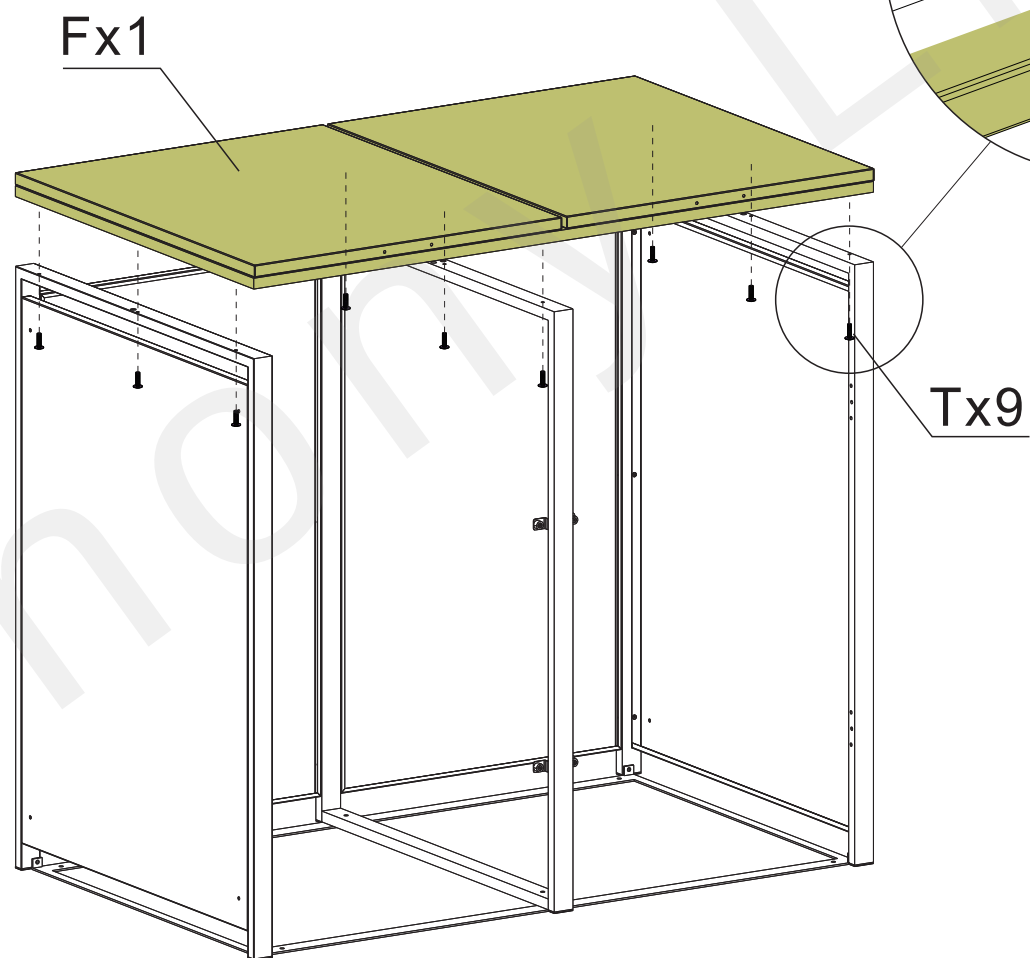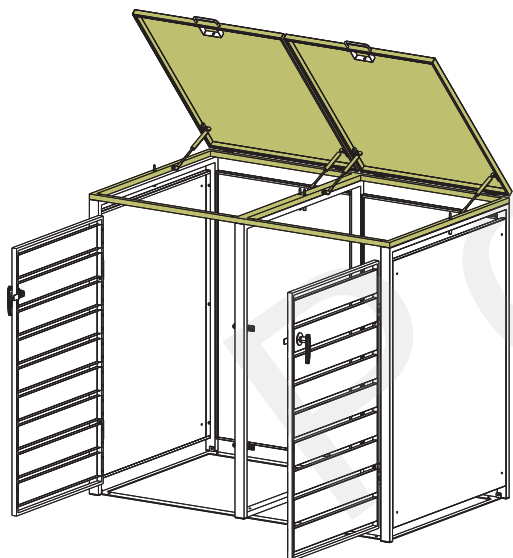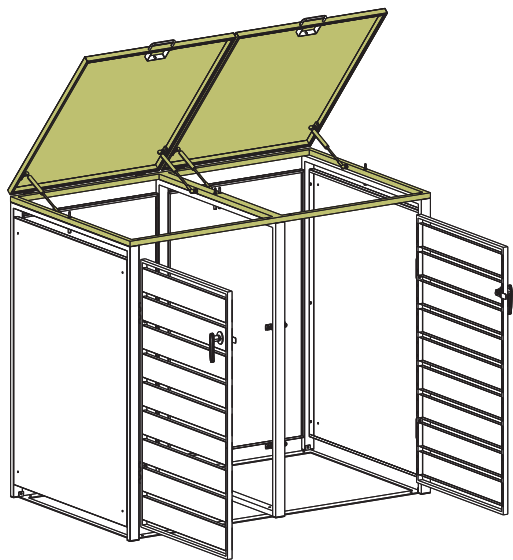   

KROK7

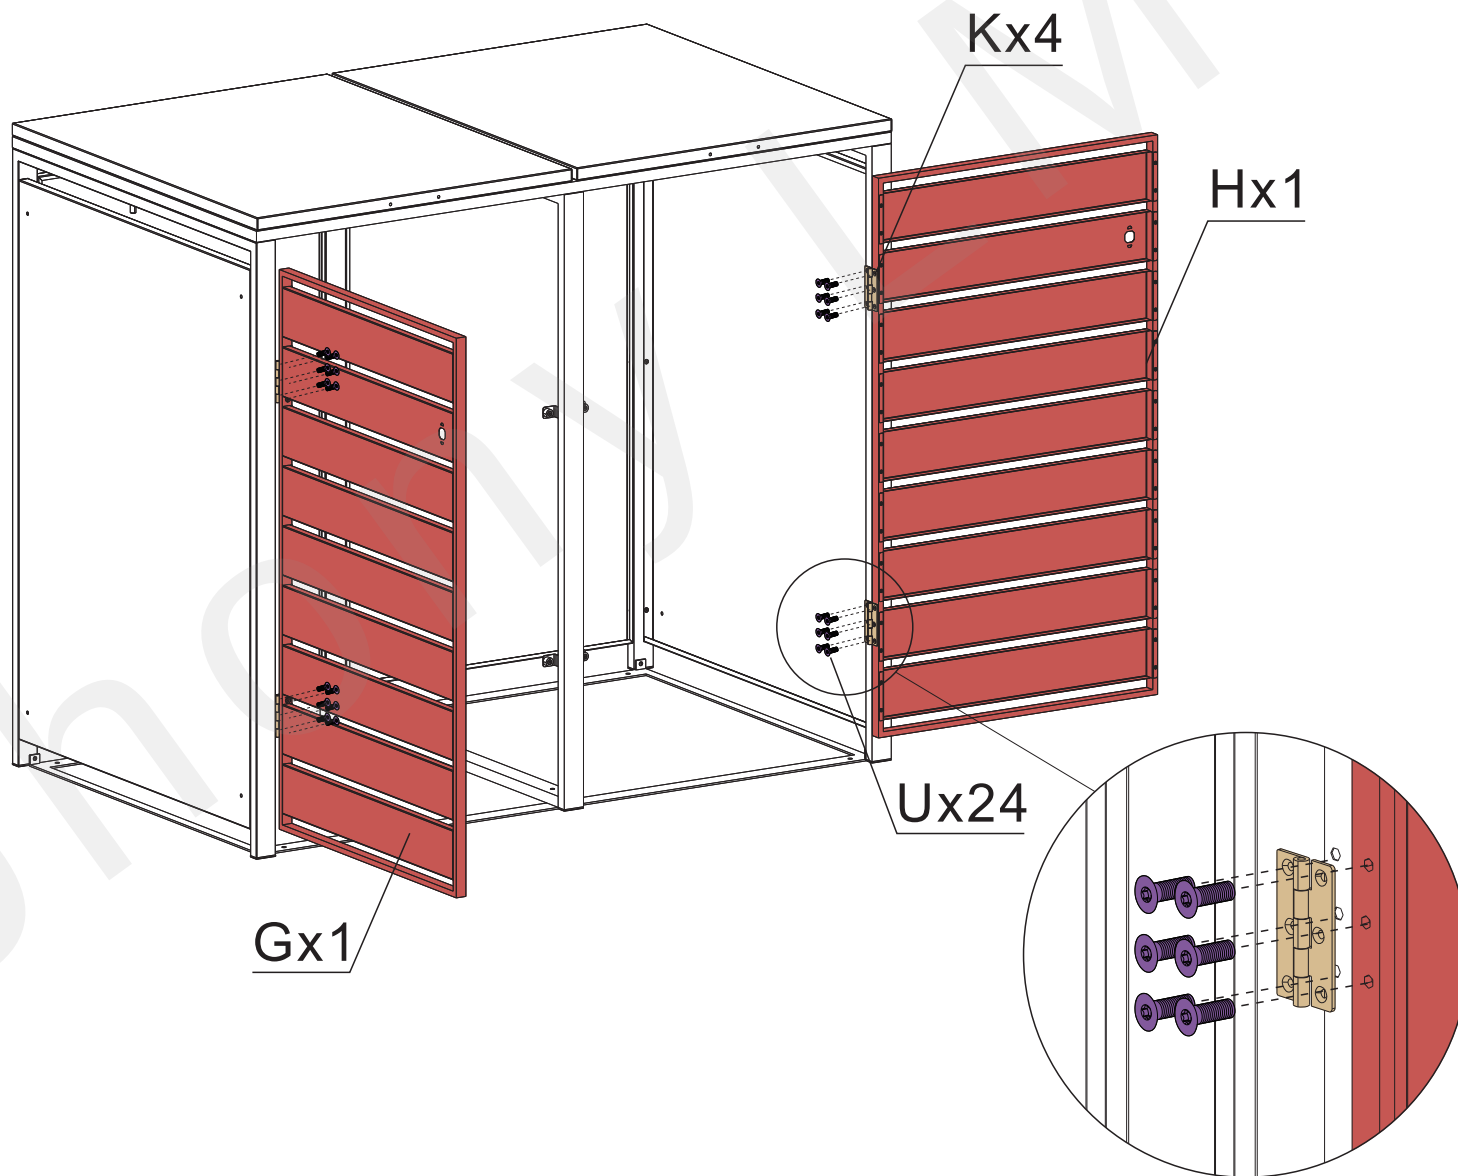 
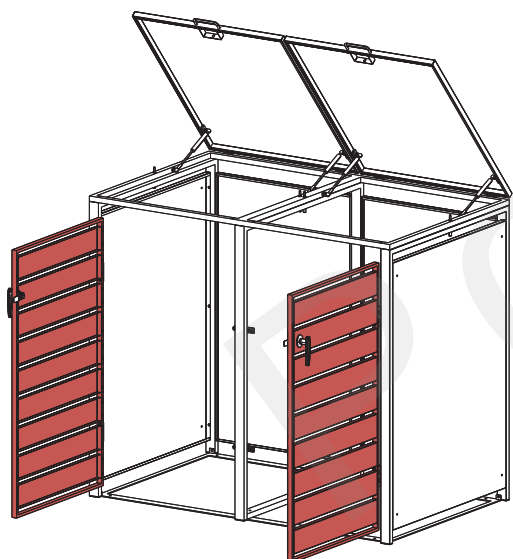 
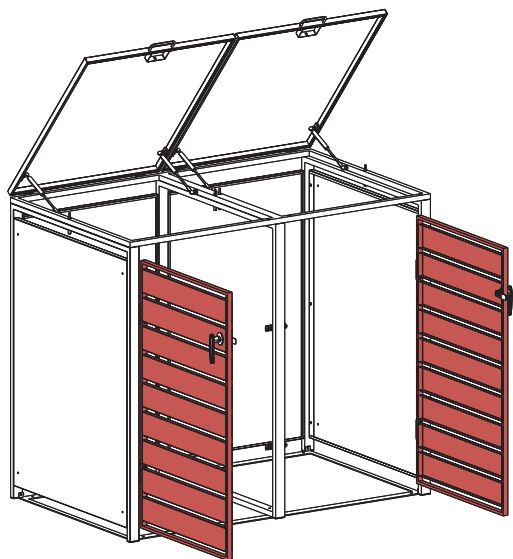 


KROK8

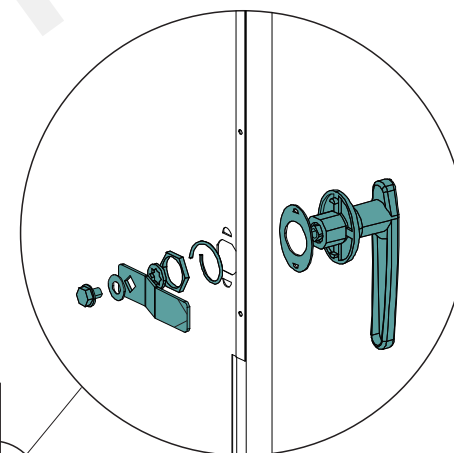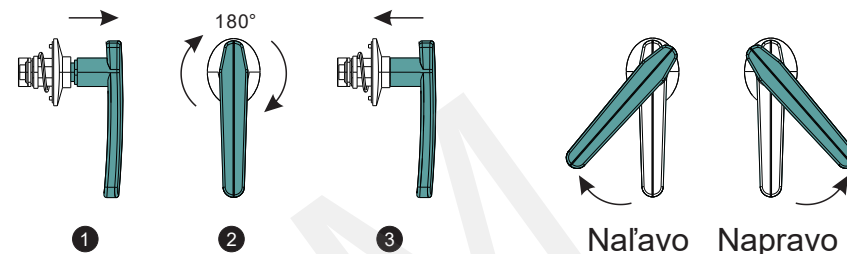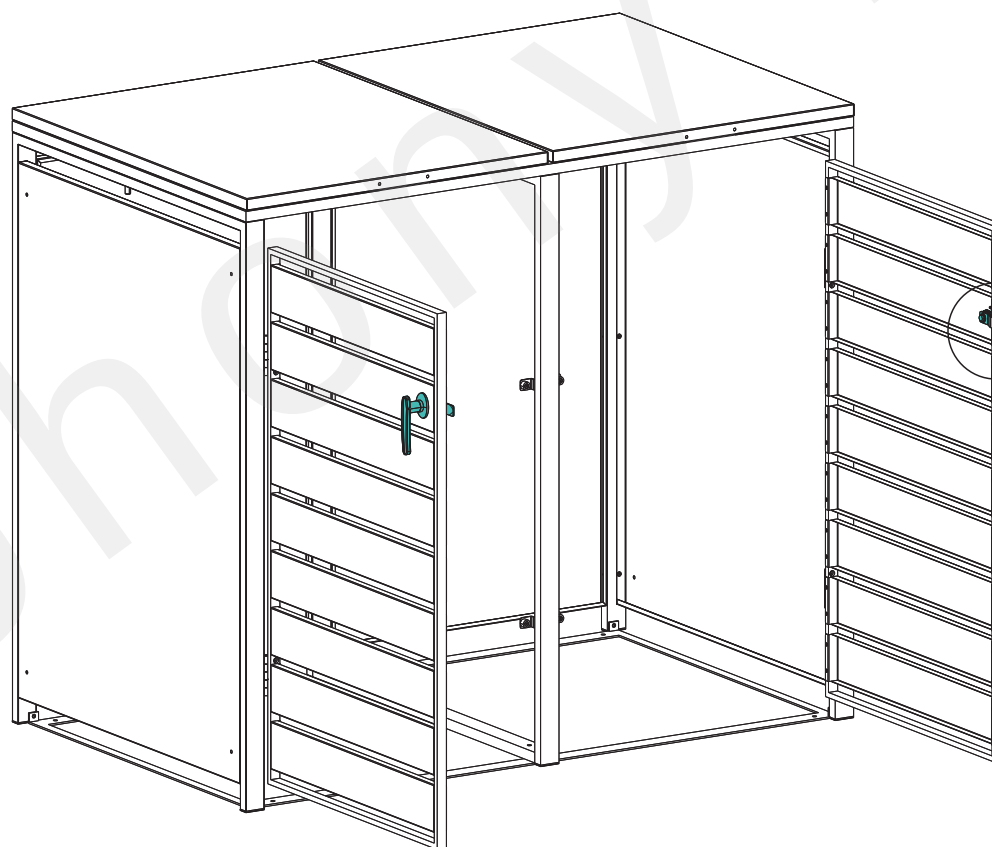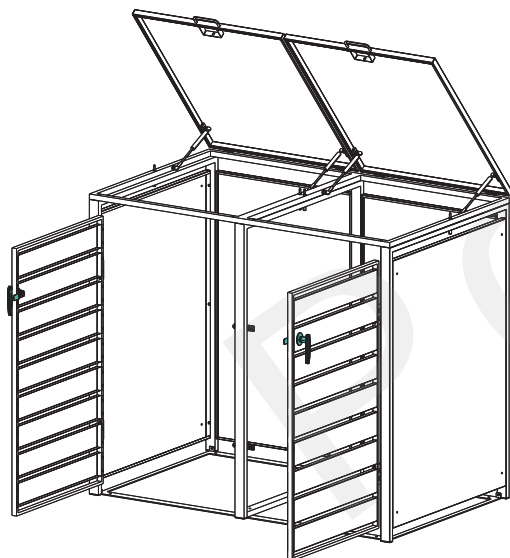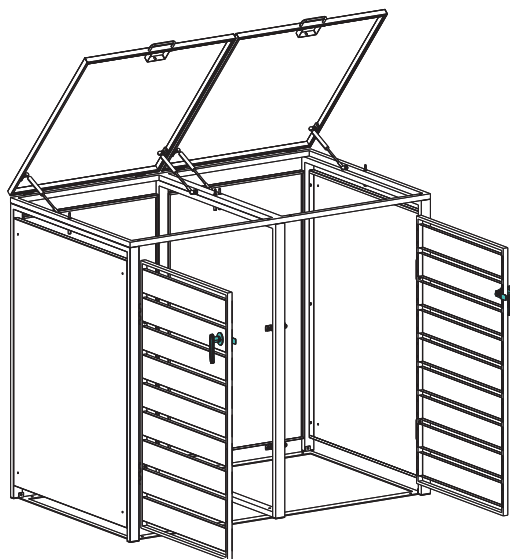     

Mx2

   KROK9

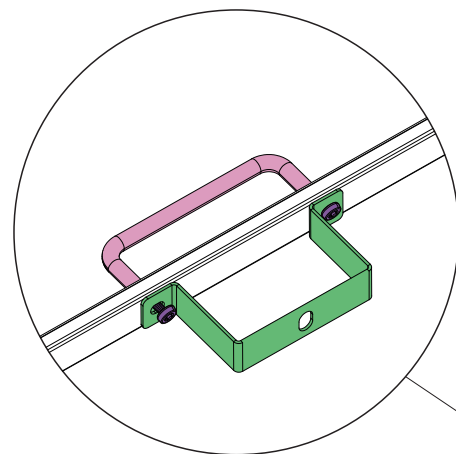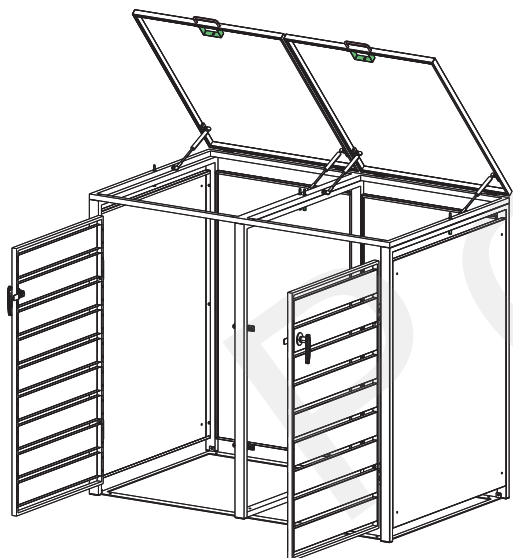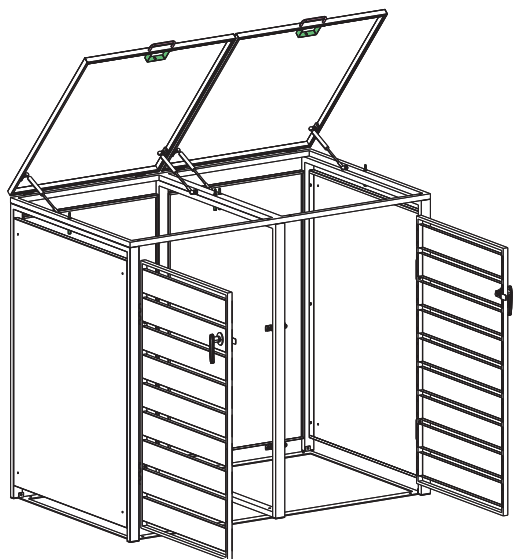


Nx2


Ox2

Px4

 Sx4

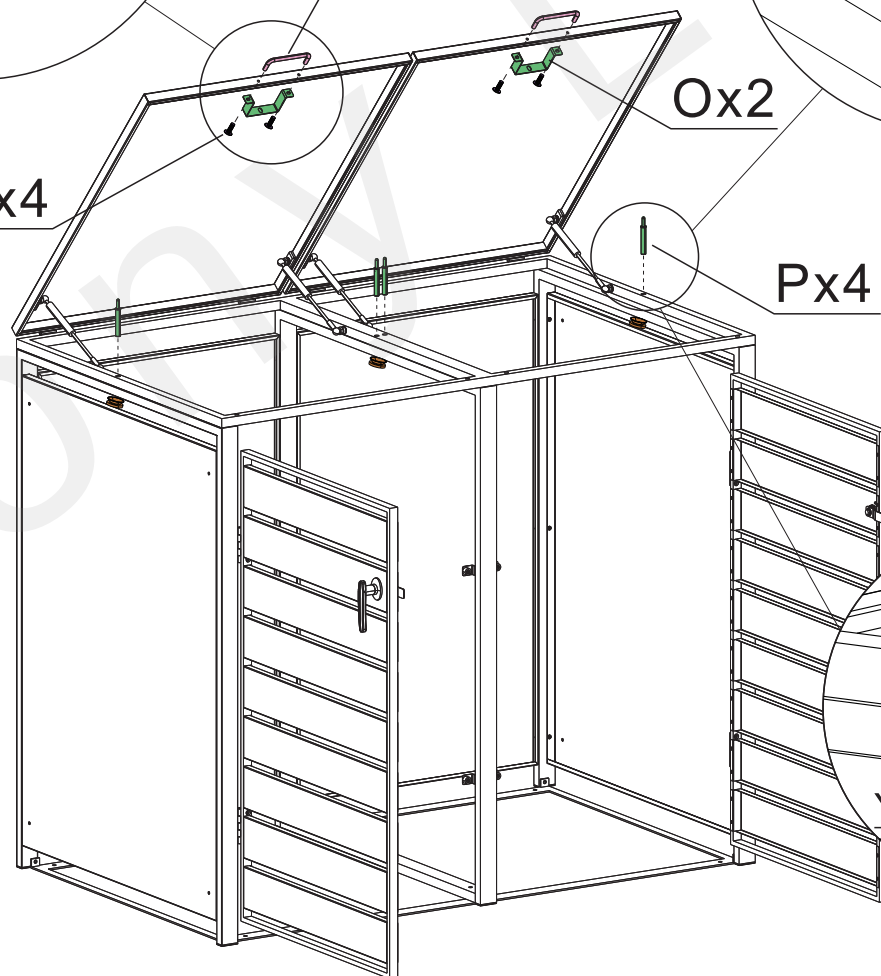

Y1x4

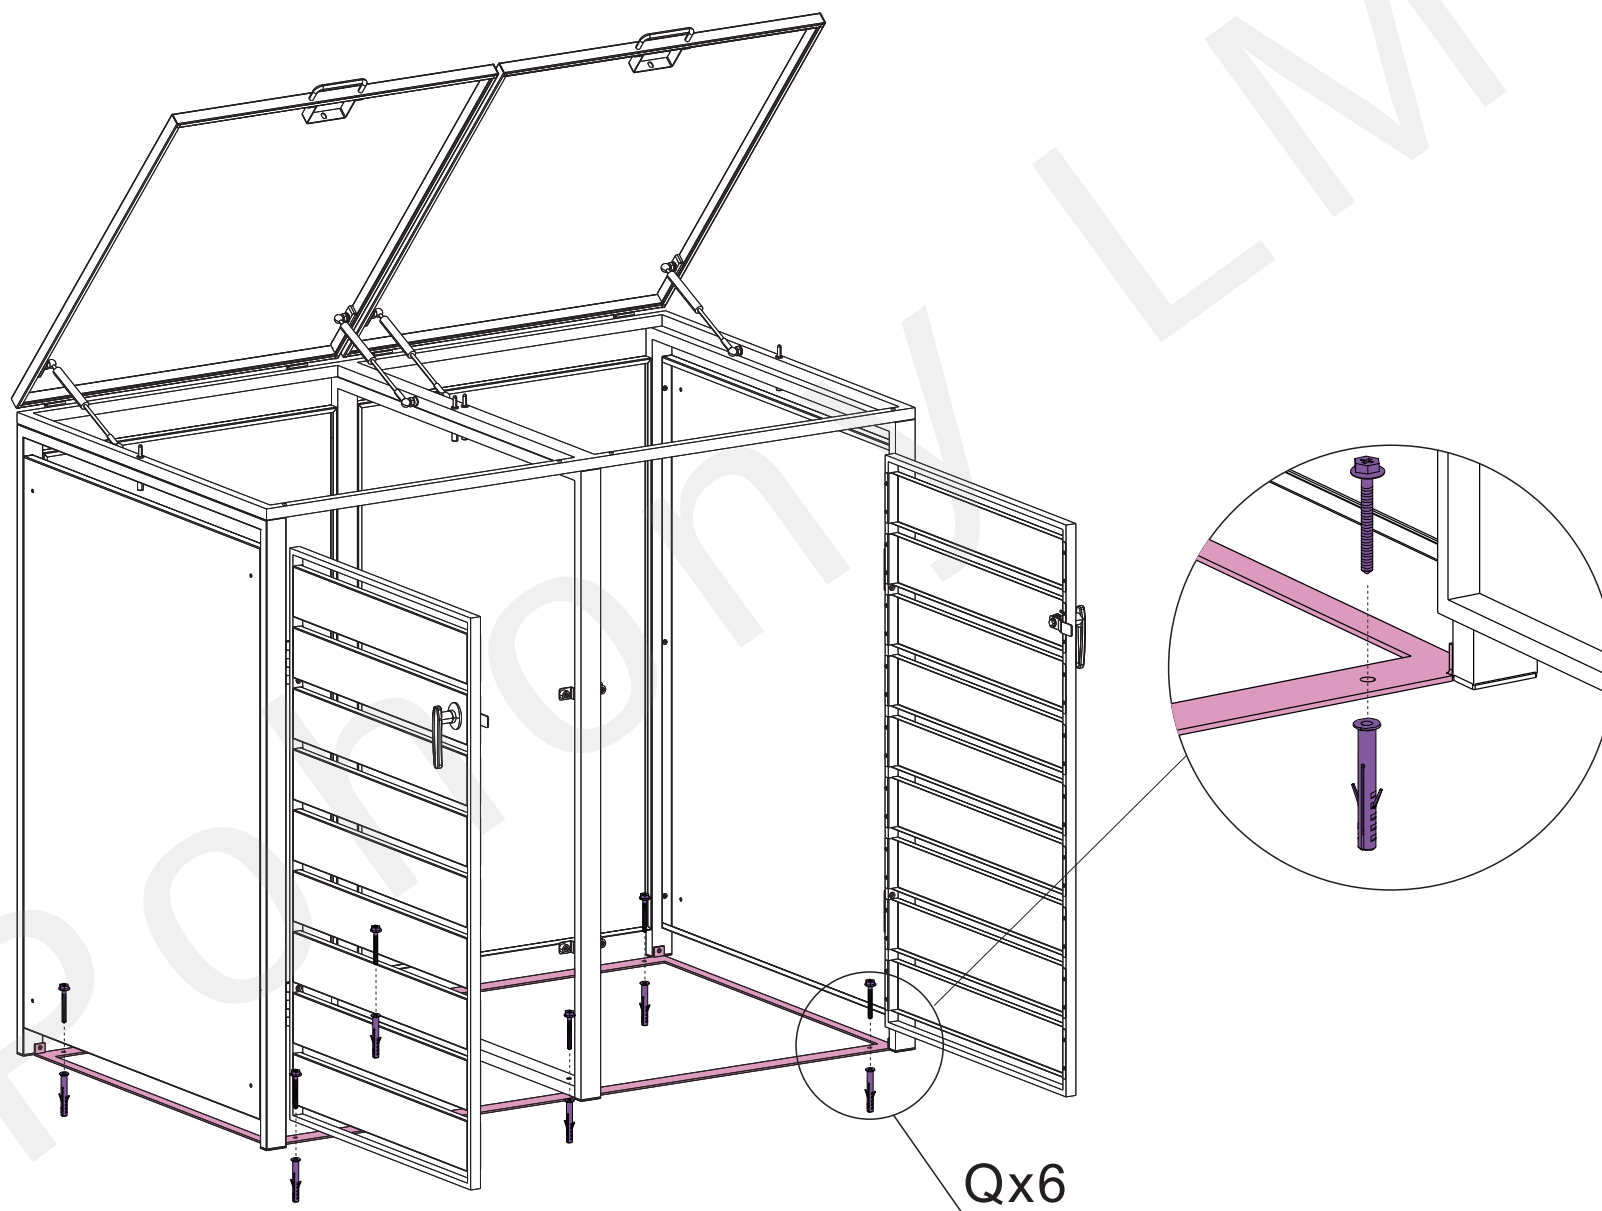 

KROK11

