

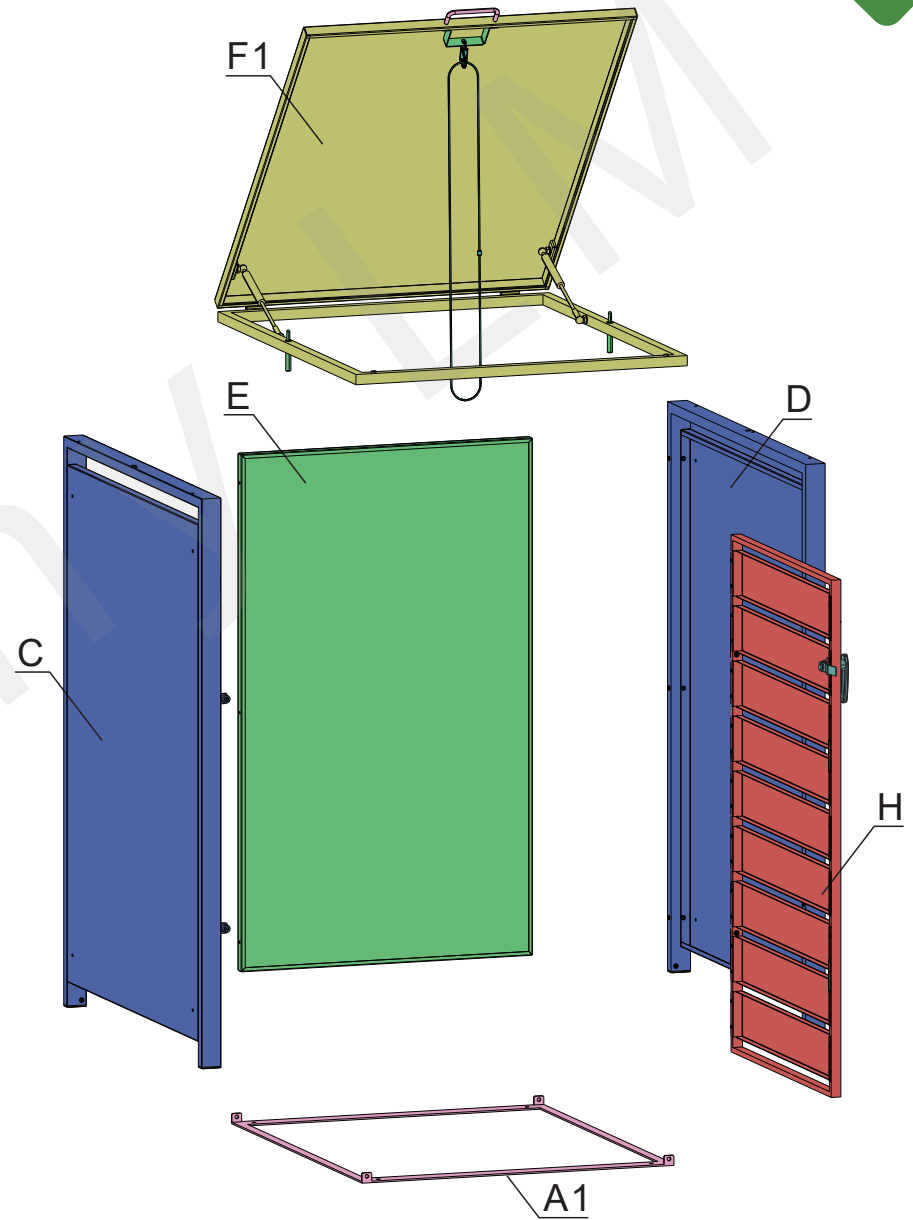
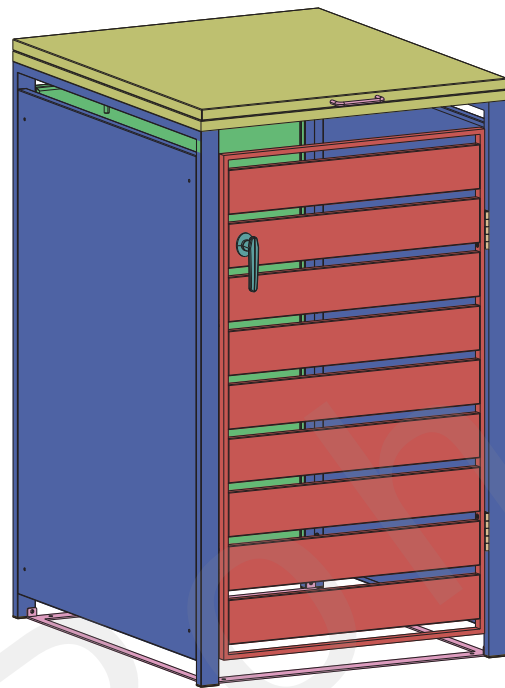
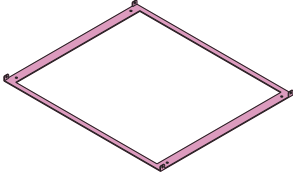
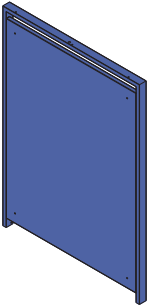
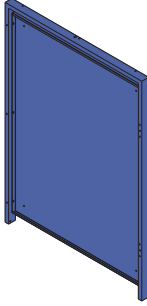
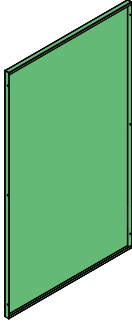
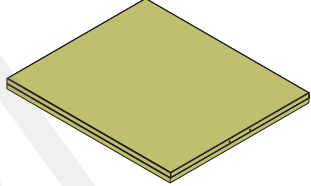
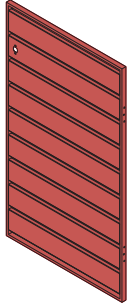
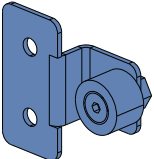
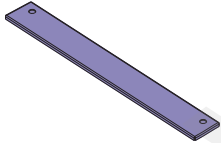

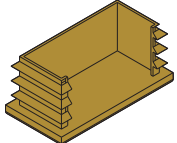
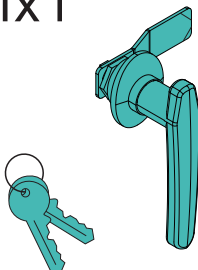
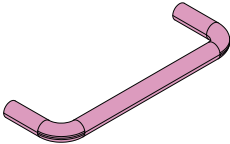
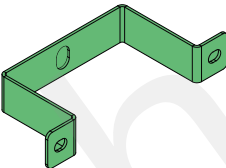
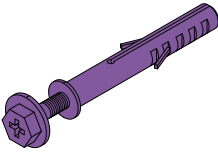


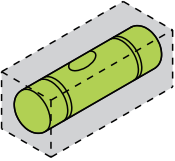
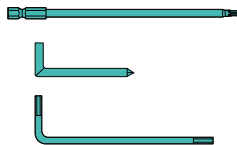

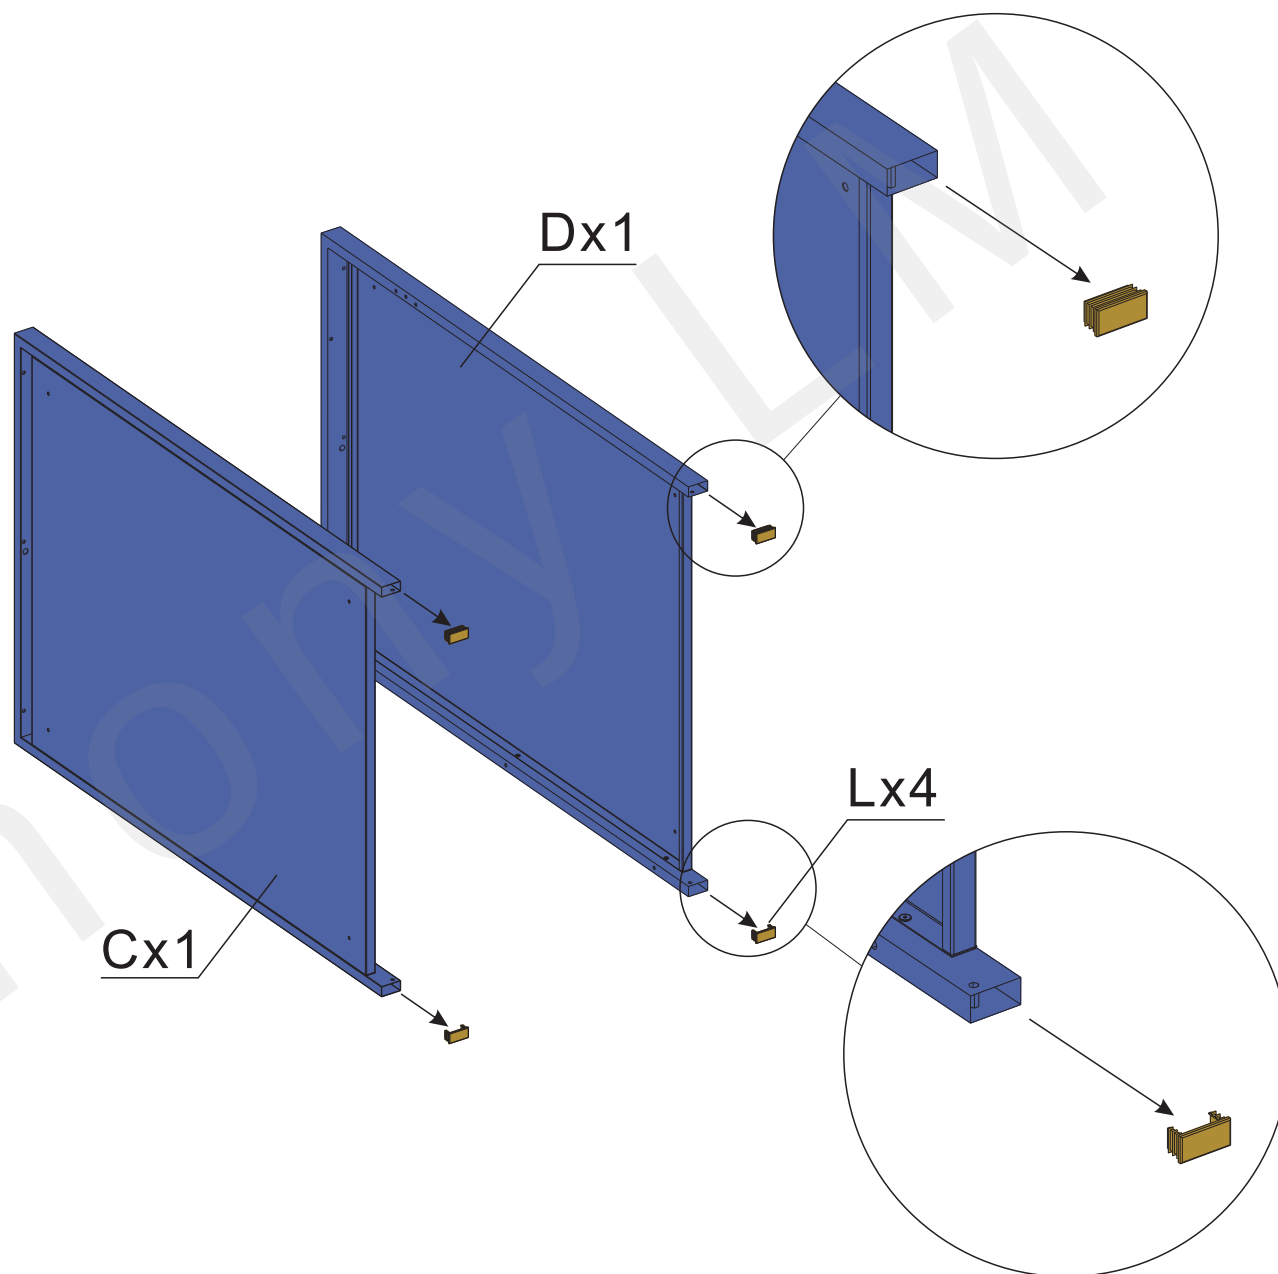


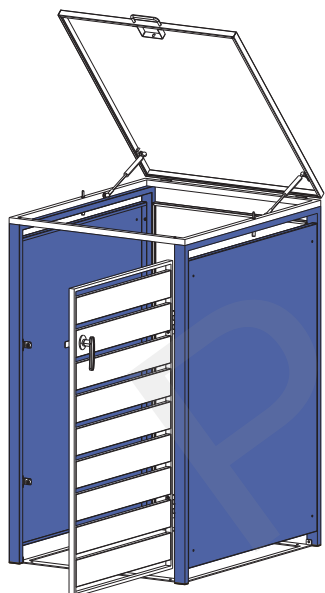




A1x1 	Cx1 	Dx1 	Ex1 	F1x1 			
Hx1 	I1x2 	Jx1 	Kx2 	Lx4 			
Mx1 	Nx1 	Ox1 	Px2 	Qx4 	Rx10 	Sx8 	Tx6 
					M4x10mm	M4x20mm	M4x30mm
Ux16 	Vx1 	Wx4 	Xx4 	Yx1 	Zx1 	Y1x2 	
M4x12mm							

Poznámka: Ak chcete pripojiť ďalší kryt na kôš, použite prosím diely S, W + X.




KROK1

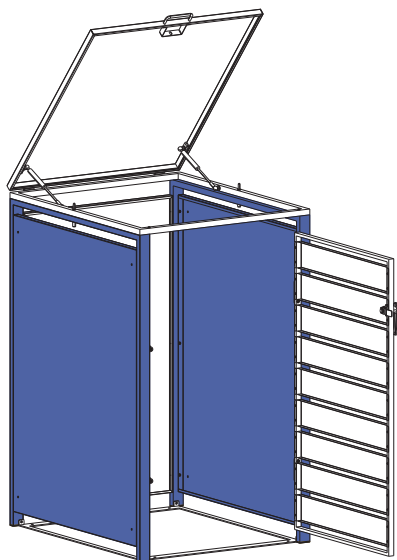



KROK2

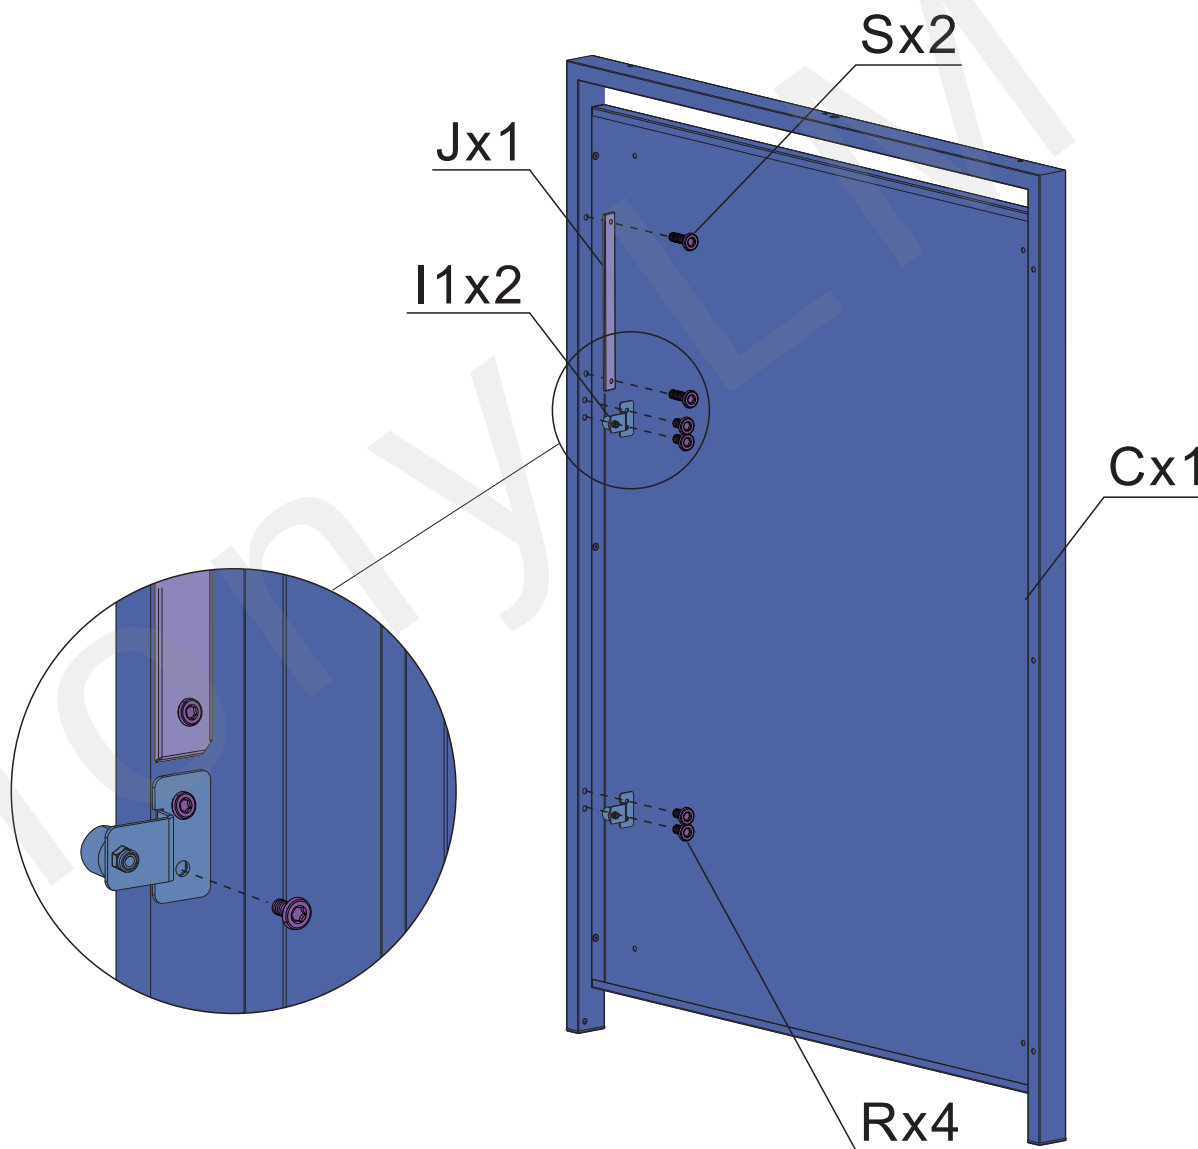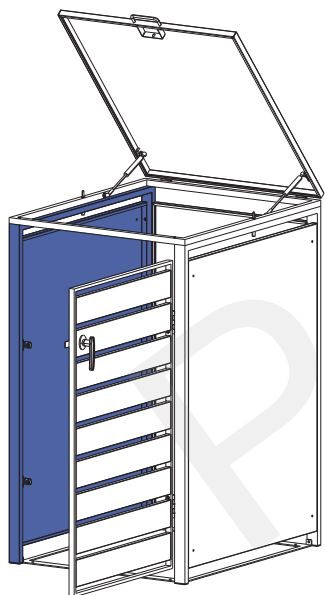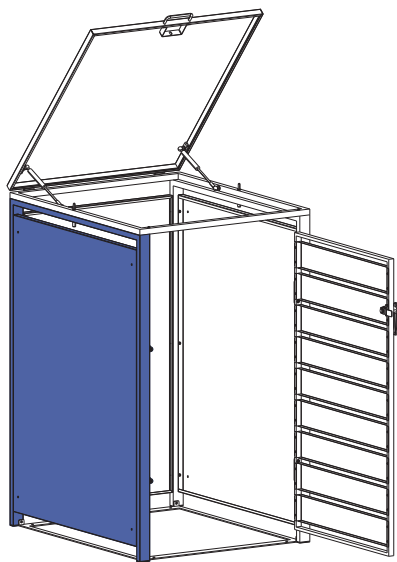


KROK3

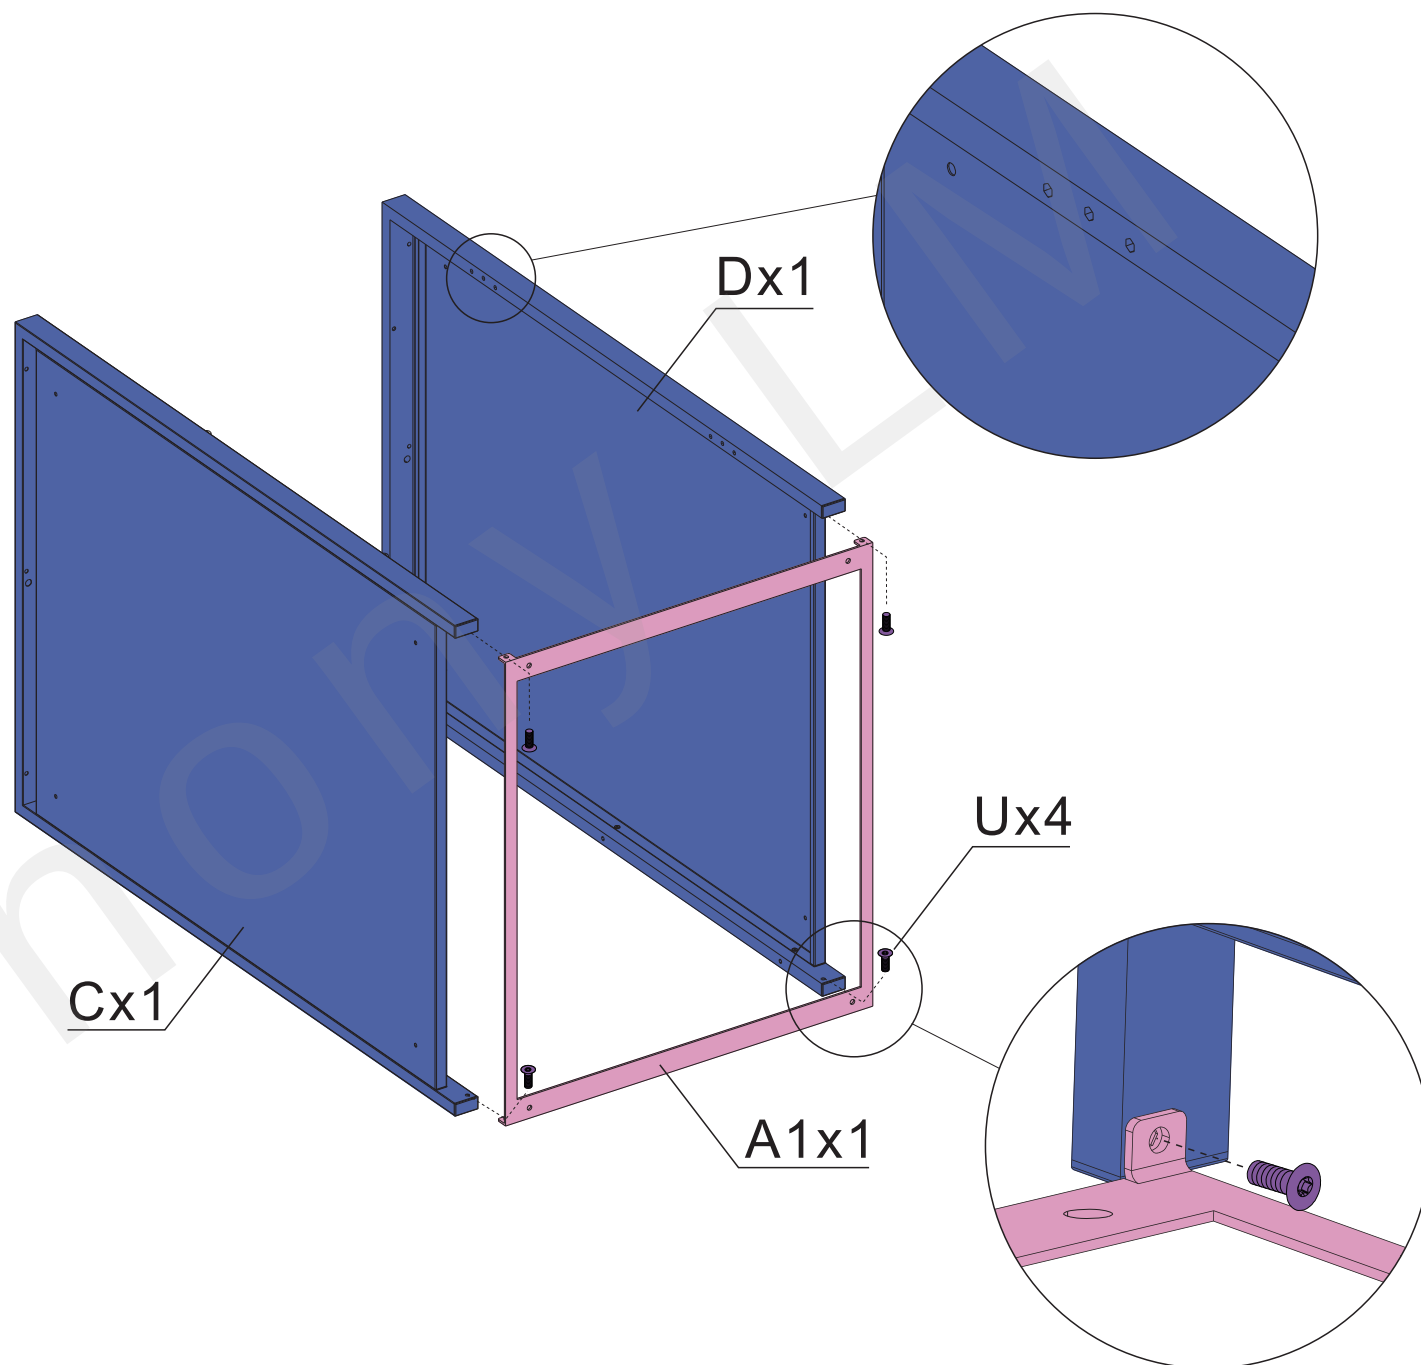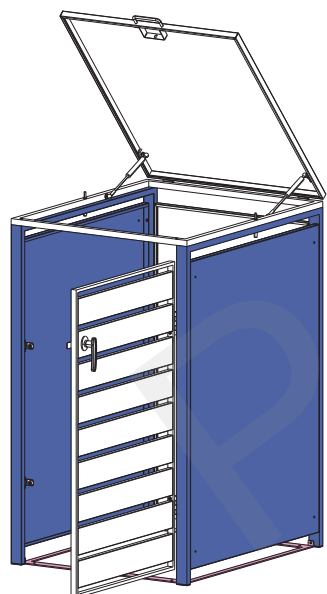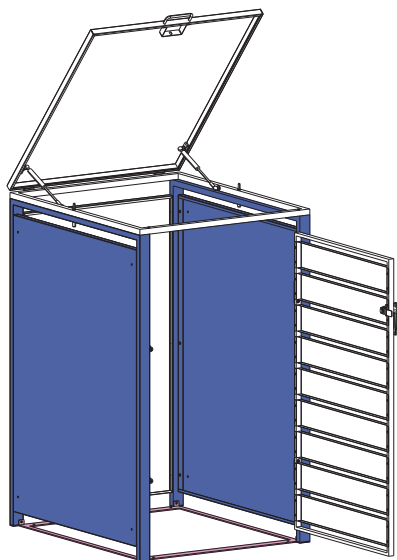



KROK4

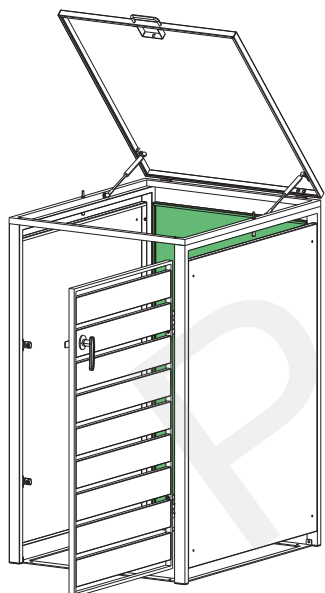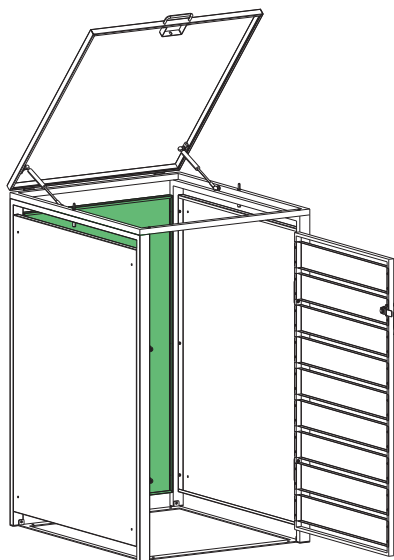


Ex1

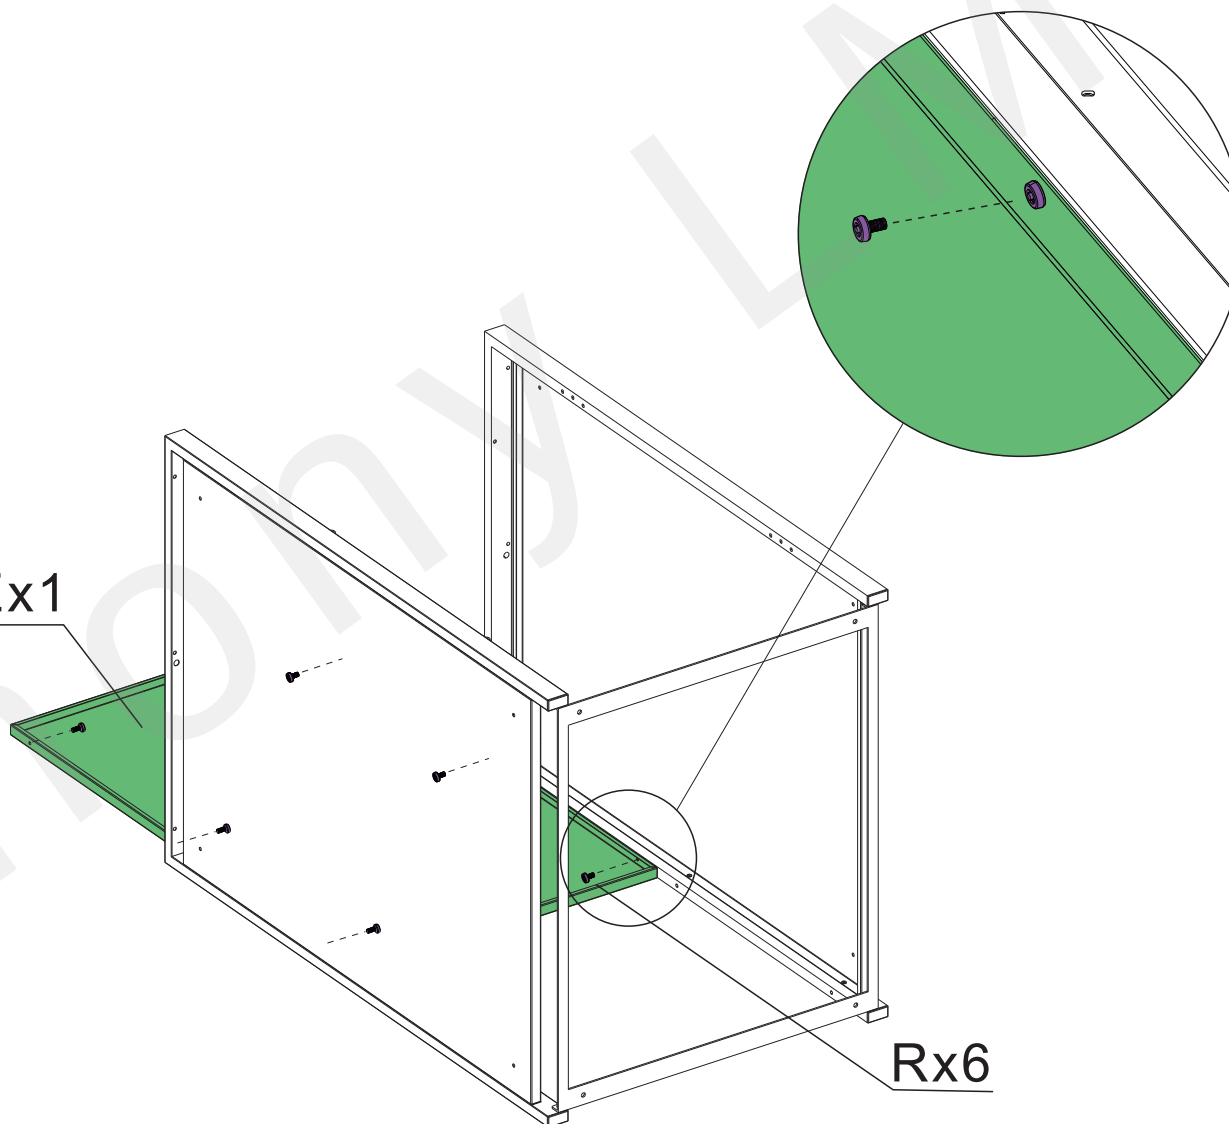

KROK5


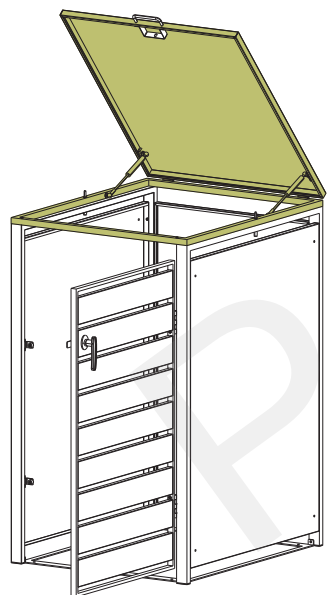
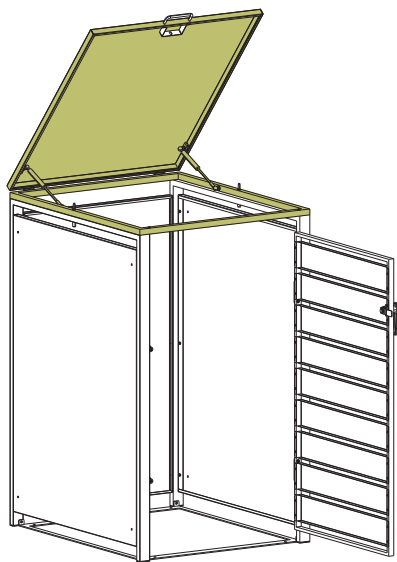


F1x1




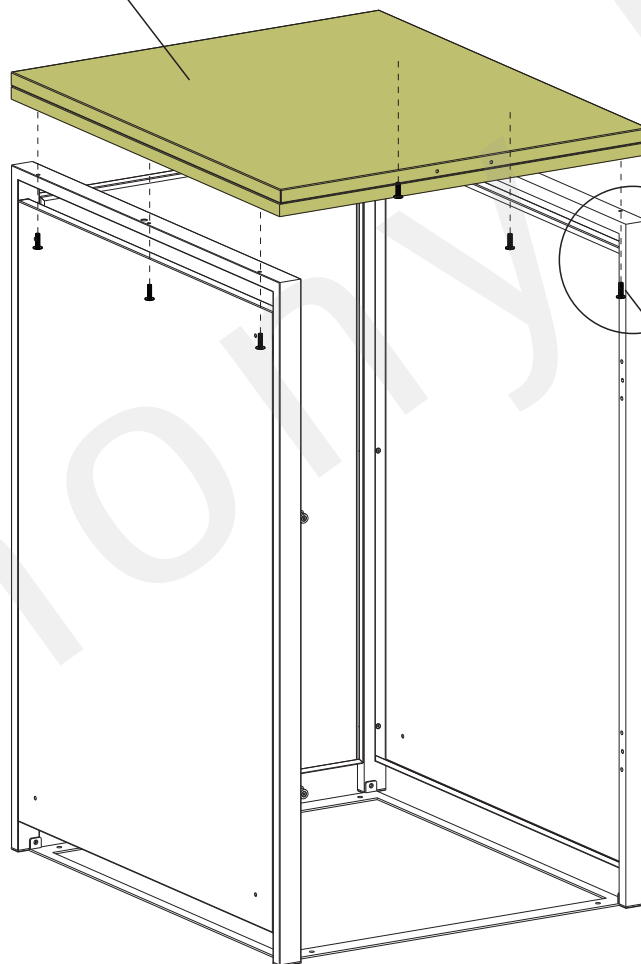


Tx6

KROK6

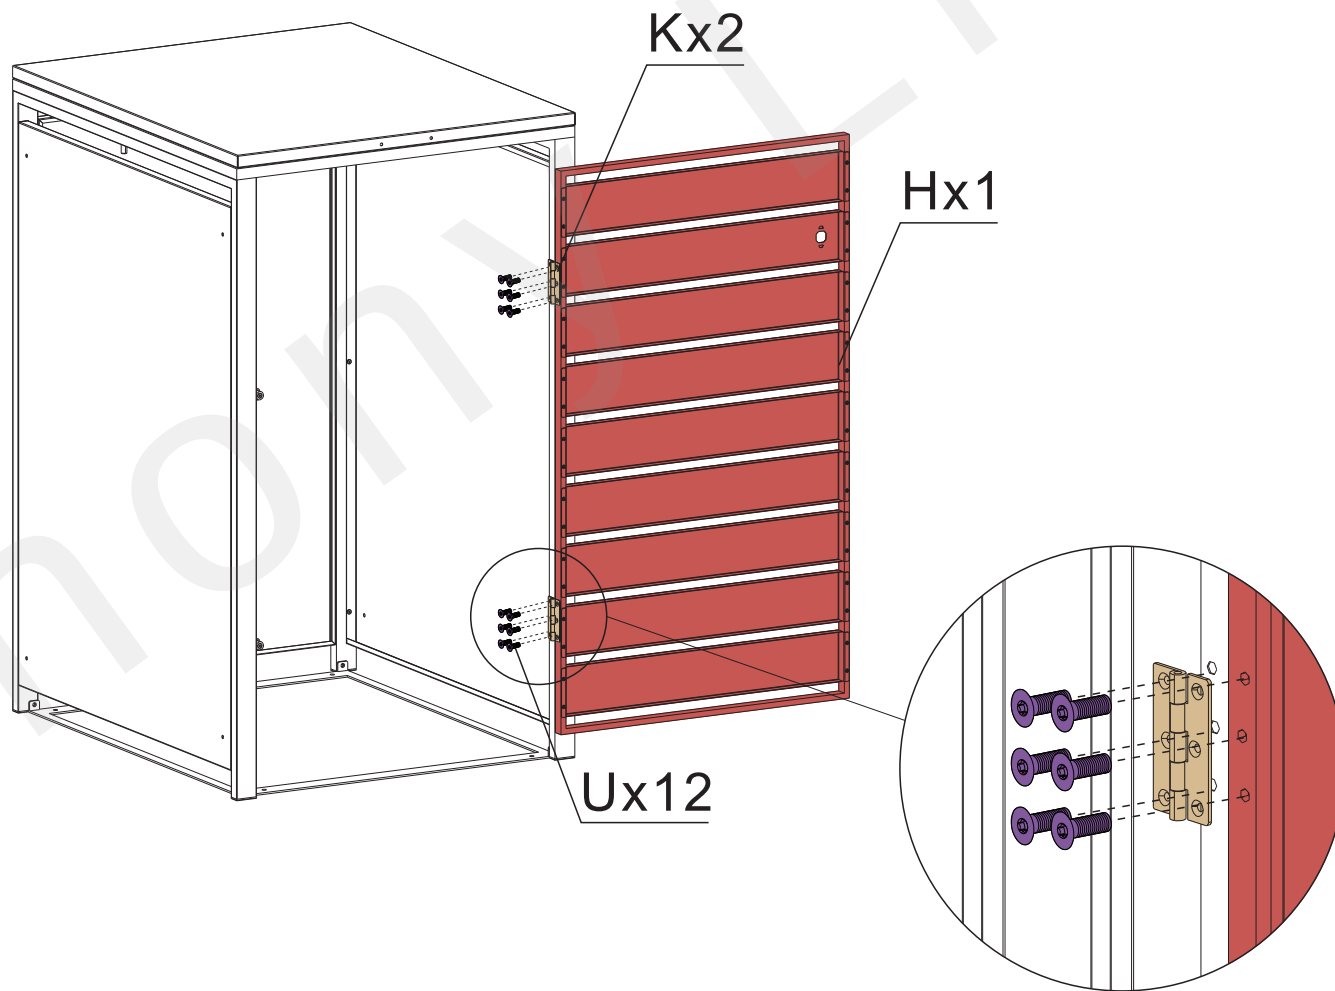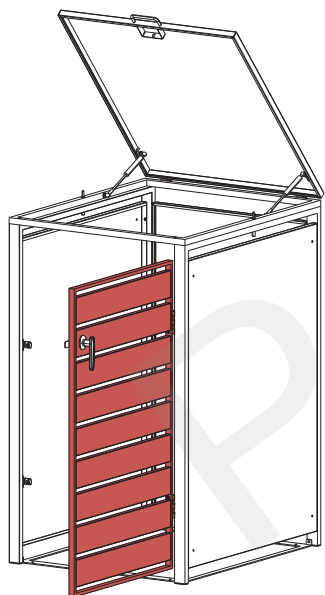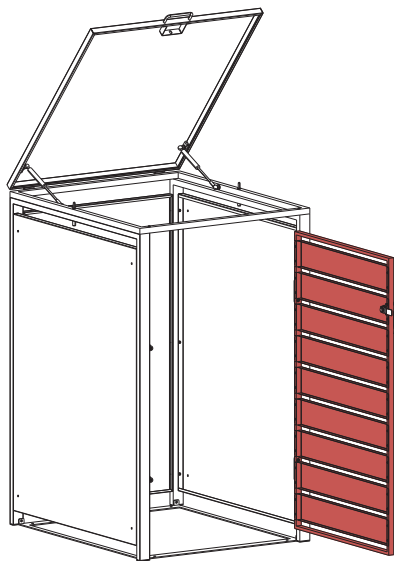







KROK7

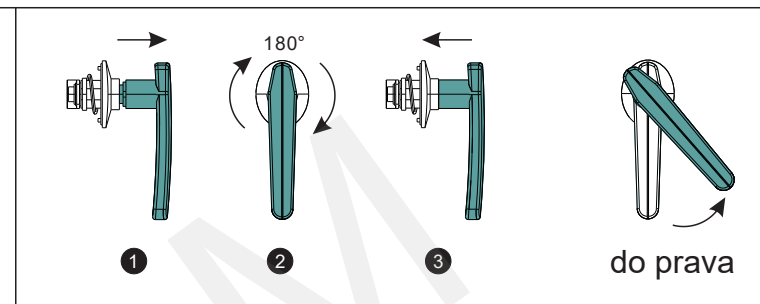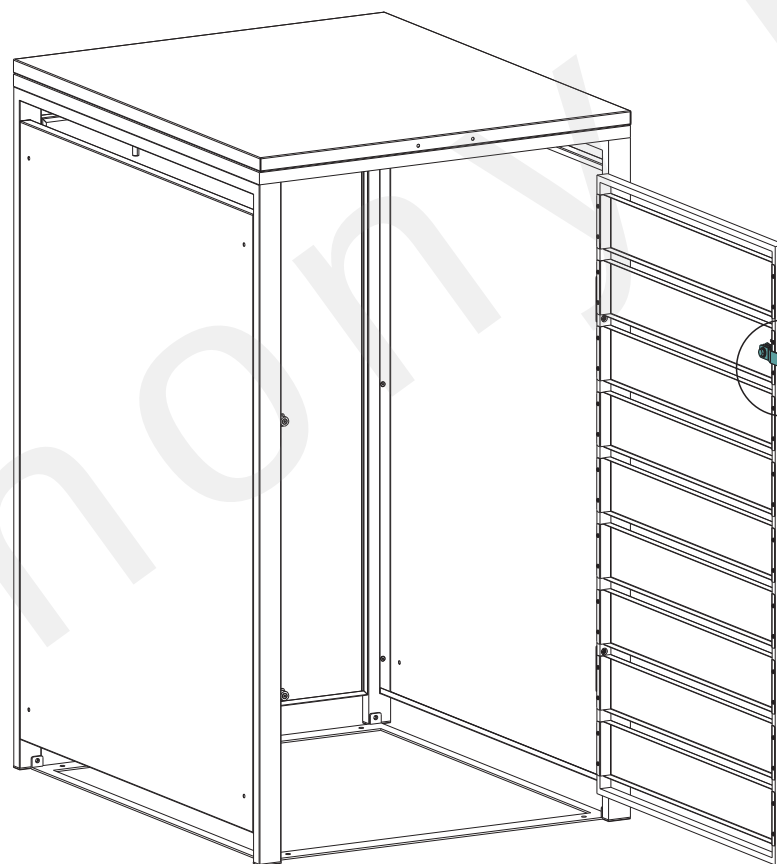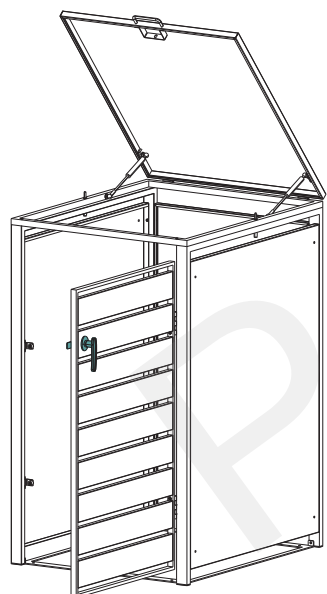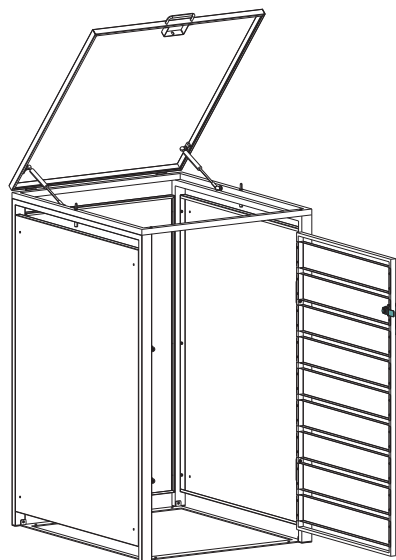

Mx1

do prava

KROK8

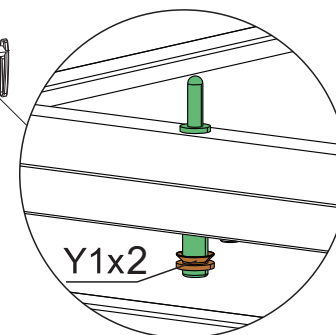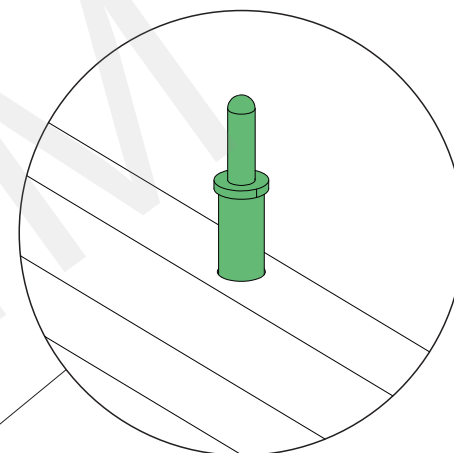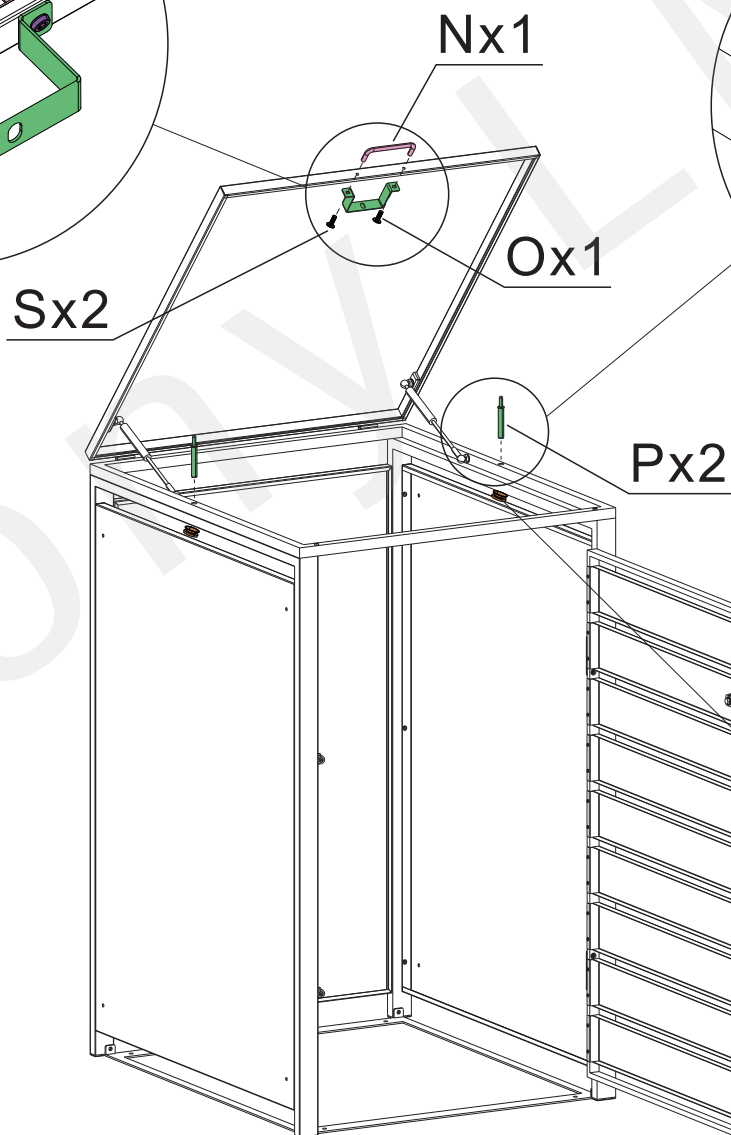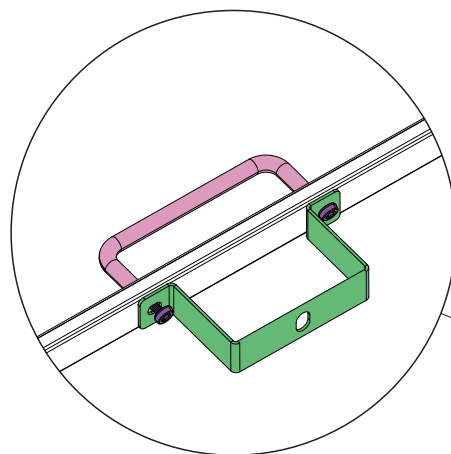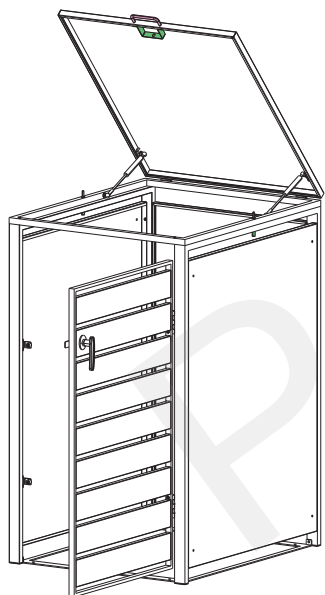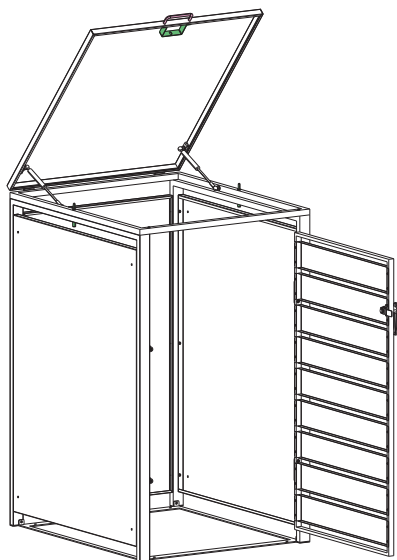

KROK9

